

Desktop ROG Strix G13CH

Service Manual



COPYRIGHT INFORMATION

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTeK COMPUTER INC.("ASUS").

ASUS PROVIDES THIS MANUAL "AS IS"WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS AND THE LIKE), EVEN IF ASUS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES ARISING FROM ANY DEFECT OR ERROR INTHIS MANUAL OR PRODUCT.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECTTO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS. ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.



LIMITATION OF LIABILITY

Circumstances may arise where because of a default on ASUS' part or other liability, you are entitled to recover damages from ASUS. In each such instance, regardless of the basis on which you are entitled to claim damages from ASUS, ASUS is liable for no more than damages for bodily injury (including death) and damage to real property and tangible personal property; or any other actual and direct damages resulted from omission or failure of performing legal duties under this Warranty Statement, up to the listed contract price of each product.

ASUS will only be responsible for or indemnify you for loss, damages or claims based in contract, tort or infringement under this Warranty Statement.

This limit also applies to ASUS' suppliers and its reseller. It is the maximum for which ASUS, its suppliers, and your reseller are collectively responsible.

UNDER NO CIRCUMSTANCES IS ASUS LIABLE FOR ANY OF THE FOLLOWING: (1) THIRD-PARTY CLAIMS AGAINSTYOU FOR DAMAGES; (2) LOSS OF, OR DAMAGE TO, YOUR RECORDS OR DATA; OR (3) SPECIAL, INCIDENTAL, OR INDIRECT DAMAGES OR FOR ANY ECONOMIC CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), EVEN IF ASUS, ITS SUPPLIERS OR YOUR RESELLER IS INFORMED OF THEIR POSSIBILITY.

SERVICE AND SUPPORT

Visit our multi-language website at https://www.asus.com/support/

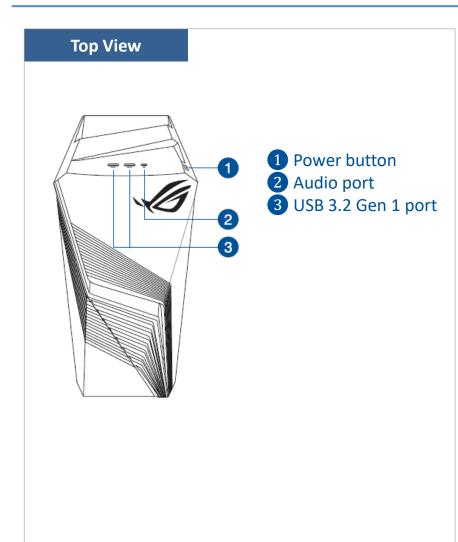



Table of Contents

- ASUS Desktop ROG Strix G13CH Overview
- Components Top View
- Components Bottom View
- Appropriate Tools
- Disassembly steps :
 - SLIDE DOOR
 - VGA CARD
 - DDR
 - SPRING SCREW COOLER
 - 9CM SYS FAN
 - FRONT BEZEL AND LED BOARD
 - TOP COVER
 - CPU FAN 12CM
 - FRONT IO BOARD
 - SSD
 - MAIN BOARD & CPU
 - WLAN CARD
 - POWER SWITCH
 - HDD & IO SHIELDING
 - POWER SUPPLY
 - LED BOARD
 - CABLE ASSEMBLY



ASUS Desktop ROG Strix G13CH Overview



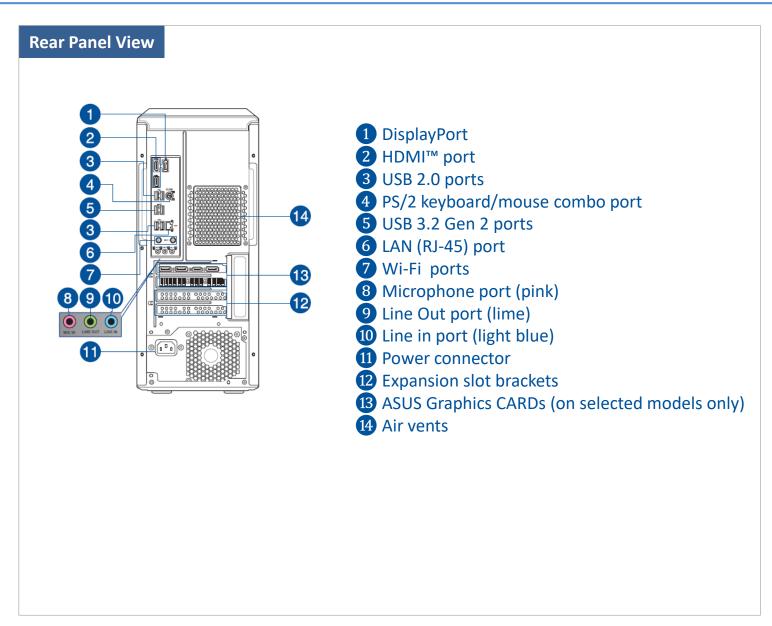



Components Top View

♦ VGA CARD (RTX3070-8GD6)



(PH-RTX3050-8G, PH-RTX3060-12G)



♦ DDR



♦ SSD



♦ WIFI CARD



♦ TH BRACKET



♦ G16CH M2 SSD SINK



♦ M2 PAD 25X20X7

♦ 9CM SYS FAN



♦ HDD



♦ CPU FAN 12CM



♦ FIO USB



♦ CABLE USB2.0


CRB TO MB

♦ POWER SUPPLY

♦ SPRING SCREW COOLER



♦ PD500TC M2 SSD SINK

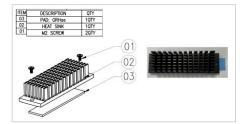

♦ POWER SW CABLE



♦ HDD SATA CABLE



♦ SIDE BD CABLE



♦ AUDIO CABLE



♦ SIDE LED CABLE



♦ FFC CABLE 14P 0.5MM



♦ G16CH B760M IO:6USB/2HDMI/D



♦ RFCABLE ASSEMBLY SMA ♦ SHIELDING FOR Z690 WIFI



♦ DIPOLE ANTENNA 2T2R **RSMA**



♦ VGA BKT SLOT1 (for PH-RTX3050-8G,

VGA CARD)

PH-RTX3060-12G



♦ POWER SWITCH HOLDER

♦ FFC CABLE 20P 0.5MM ♦ VGA SUPPORT BKT



♦ SPNL SCREW PACKAGE

(for Turbo RTX3070

VGA CARD)



♦ MAIN BOARD



♦ WIRE SADDLE*2pcs



♦ FIOL ODD OPPENING SHIEL



♦ SIDE DOOR PLATE

SHADOW BLACK



♦ LED BD (SIDE UP)



♦ LED BD (SIDE DOWN)





♦ FRONT IO BD



♦ USB CABLE ACETATE TAPE

USB CONN GASKET

♦ LED BD (CR)



♦ LED BD (DOWN)



♦ LED BD (UP)





Components Bottom View

♦ LED BD UP



♦ LED BD DOWN



♦ LED CR BD



♦ SIDEDOWN LED BD



♦ SIDEUP LED BD



♦ PD500TC M2 SSD SINK




♦ G16CH M2 SSD SINK



♦ POWER SWITCH HOLDER



♦ MAIN BOARD

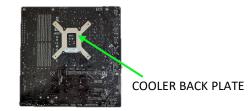

♦ SPRING SCREW COOLER





Appropriate Tools

Please prepare and select the appropriate tools to disassemble/assemble for the ROG Strix (G13CH) desktop.

♦ Screwdriver

Please accord to different screw specification to choose different screwdriver and head.

#1 #2





♦ Alcohol 95%



♦ Glove



♦ Dust-free Cloth



♦ Plastic Blade



Use a pair of tweezers to remove/insert/tidy cables.



♦ Cable Tie (Local Buy)





♦ Needle nose pliers





SLIDE DOOR

Disassembly Notice


Please be sure to pull out AC POWER CORD.



Step 1 : Remove screws *4pcs. Step 2 : Pull the side doors *2pcs.

Screws	QTY	Spec	Torque (kgf-cm)
10	4	SCREW #6-32*6.3L (7.3,2.45)	8.0±0.5



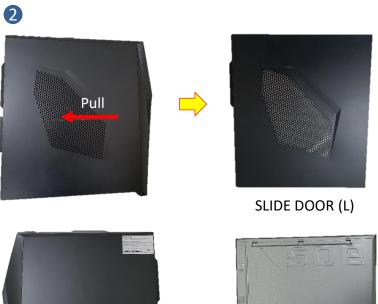

Pull







SLIDE DOOR (R)



SLIDE DOOR





Assembly Notice

Please follow the instructions below to assemble SPNL SCREW and SIDE DOOR PLATE SHADOW BLACK.








SIDE DOOR PLATE SHADOW BLACK



Step-1 Assemble screws*4pcs.

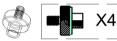



Step-2 Assemble SIDE DOOR PLATE SHADOW BLACK to CHASSIS











VGA CARD

Disassembly Notice Please be sure to pull out AC POWER CORD.



Step 1: Disconnect cable (Yellow mark).

Step 2: Open the case and remove screws *4pcs (Red and Blue mark).


Step 3: Press and unlock the VGA CARD (Green mark).


Step 4: Take out the VGA CARD, then remove screws *2pcs, remove VGA SUPPORT BKT from VGA

CARD(side).

Screws	QTY	Spec	Torque(kgf-cm)
10	2	SCREW M3*4L (6.3,2.05) (B) #2	6.0±0.5
10	2	SCREW M2.5*4L(4.5,1.8) (P) #1	3.0±0.5
TO	2	SCREW #6-32*L6 (B)B-NI-ZN NY	6.0±0.5

- Disconnect Cables (Yellow mark).
- Open the case and unscrew (Red and Blue mark).

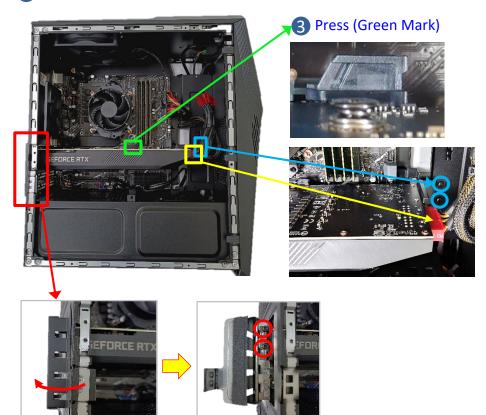

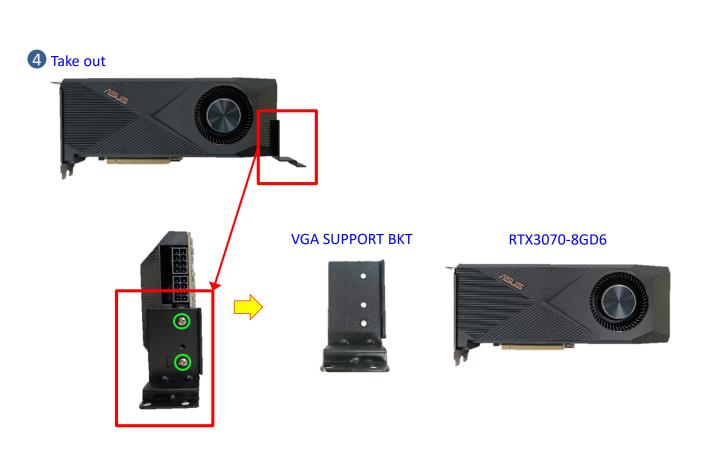




VGA CARD

Assembly Notice Please follow the below steps to assemble PH-RTX3050-8G, PH-RTX3060-12G VGA CARD.

Step-1 Assemble the VGA BKT SLOT1 on the side of the VGA CARD.



Step-2 Assemble the STAND OFF on the MB.

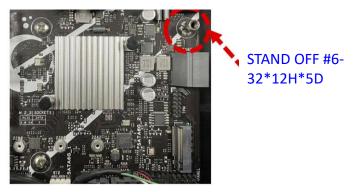

Step-3 Assemble the VGA CARD on the MB and screws*3pcs.



SCREW #6-32*6L(7.1,2.3) (B) #2

SCREW #6-32*6.3L (7.3,2.45)(B)*2pcs






Disassembly Notice Please be sure to pull out AC POWER CORD.



Step 1 : Press down and unlock DDR, then remove DDR *4pcs.

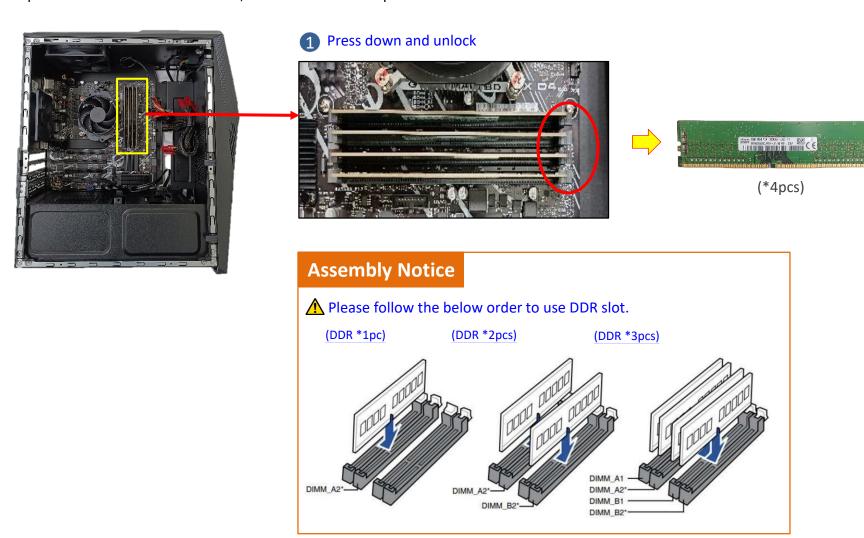



SPRING SCREW COOLER


Disassembly Notice


Please be sure to pull out AC POWER CORD.




Step 1: Release 4 screws (green mark) holding on the SPRING SCREW COOLER, then disconnect the cable connector(red mark).

Step 2: Take out SPRING SCREW COOLER.

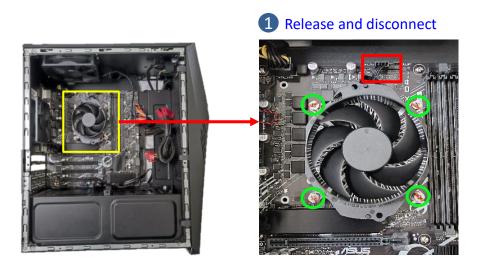

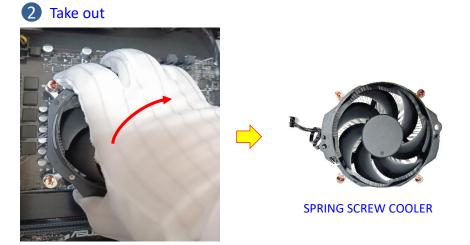



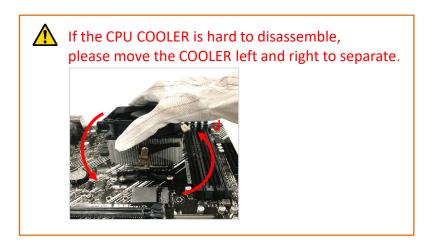



9CM SYS FAN

Disassembly Notice Please be sure to pull out AC POWER CORD.



Step 1 : Disconnect FAN connector *1pc. (yellow mark) Step 2: Remove screws *4pcs on the outside of iron grid.

Step 3 : Take out the Fan *1pc.

Screws	QTY	Spec	Torque (kgf-cm)
	4	M5*10L (K) B-NI TAPPING	8.0±0.5

















FRONT BEZEL AND LED BOARD

Disassembly Notice

Please be sure to pull out AC POWER CORD.



Step 1: Pull the latch (green mark) to rele	lease and open FRONT BEZEL
---	----------------------------


Step 2: Disconnect the (yellow mark) connectors and remove FRONT BEZEL.

Step 3: Remove screws *7pcs then remove LED COVER.


Step 4 : Disconnect and remove FFC *2pcs.

Step 5: Remove screws *7pcs then remove board *3pcs.

Screws	QTY	Spec	Torque (kgf-cm)
	14	M3*8L	3.0±0.5

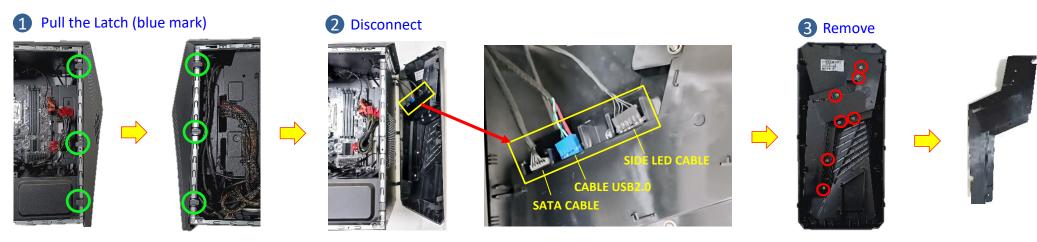



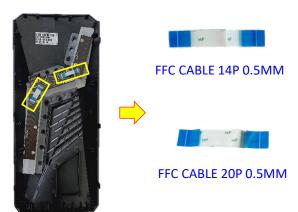

Remove







LED BD DOWN







LED CR BD for 2D (Metal side door) only

Assembly Notice


Before assemble cable on LED CR BD, please follow below steps to paste PINHEADER ACETATE FABRIC.

QTY	Spec
2	G35CA PINHEADER ACETATE FABRIC


Step1-1: PIN HEADER cannot exceed ACETATE FABRIC.

Step1-2: Align the FPC CONNECTOR and the white wire with the ACETATE FABRIC.

Step2: Take another ACETATE FABRIC and align it with the first ACETATE FABRIC and paste tightly to adhere.

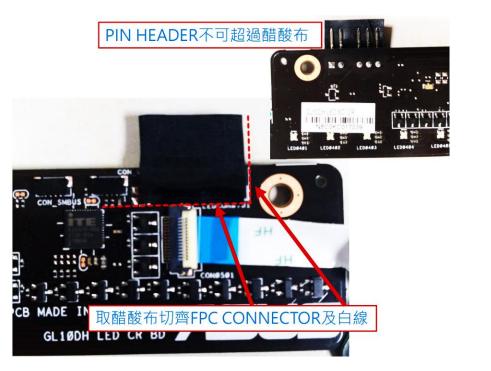



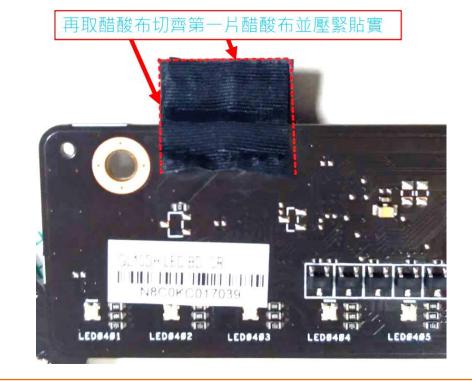



Cable for 2D(Metal side door) and 4D(Plastic side door) only

Assembly Notice

Before assemble two cables, please follow below to paste ACETATE TAPE.

QTY	Spec
2	G15DK USB CABLE ACETATE TAPE


Step1-1: Winding the two cables with ACETATE TAPE to increase the insulation layer.

Step1-2: Double arrow (angle between 70~80mm)



Note: The two cables are GL10DH SATA CABLE 15P F/P 430MM and CABLE USB2.0 CRB TO MB L750.

GL10DH SATA CABLE 15P CABLE USB2.0 CRB TO MB L750

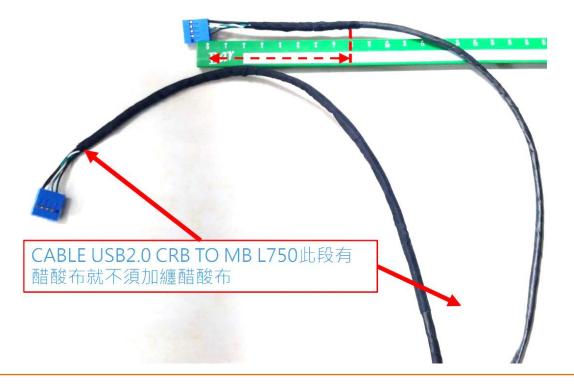



TOP COVER

Disassembly Notice

Please be sure to pull out AC POWER CORD.




Step 1 : Remove screws *2pcs.


Step 2: Pull the latch to release and remove TOP COVER.







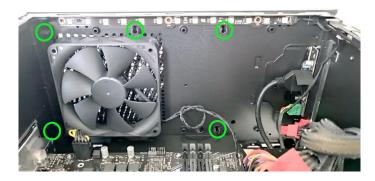

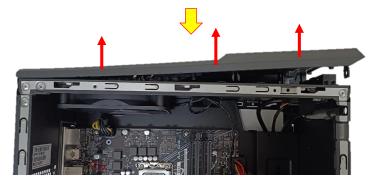







Screws	QTY	Spec	Torque (kgf-cm)
O	2	SCREW #6-32*6L(7.1,2.3) (B) #2	8.0±0.5

Assembly Notice

Please according to below image to Tidy up the cables.



SIDE BD CABLE

WIRE SADDLE*2pcs

SIDE LED CABLE





CPU FAN 12CM

Disassembly Notice Please be sure to pull out AC POWER CORD.



Step 1 : Disconnect (yellow mark) FAN connector *1pc.	
Step 2: Remove screws *4pcs on the outside of iron grid	

Step 3 : Take out the Fan*1 pcs.

Screws	QTY	Spec	Torque (kgf-cm)
0	4	M5*10L (K) B-NI TAPPING	8.0±0.5

Disconnect (yellow mark)






2 Remove



Assembly Notice

Please follow the below criteria to assemble FAN.

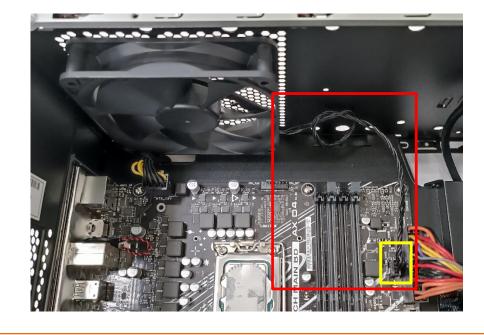



FRONT IO BOARD

Disassembly Notice

Please be sure to pull out AC POWER CORD.



Step 1: Remove screws *4pcs.(Red and green mark)


Step 2: Flip up the bracket and remove screw *1pc, then separate the FRONT IO BOARD and bracket.

Step 3: Disconnect Audio cable, remove tape from FIO USB CABLE(USB3.0) cable connector, then disconnect it.


Scr	ews	QTY	Spec	Torque (kgf-cm)
	0	2	#6-32*6L(7.1,2.3) (B) #2	8.0±0.5
	0	3	M3*4L (6.3,2.05) (B) #2	6.0±0.5



2 Flip up the bracket and remove screw*1pc

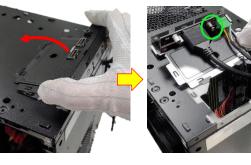

Separate the IO **BOARD** and bracket

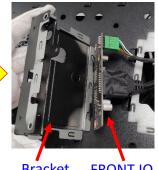


Bracket FRONT IO BOARD



3 Disconnect



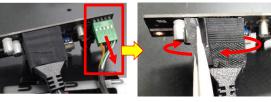





FRONT IO BOARD





USB CONN GASKET

Assembly Notice


Mhen assemble FIO USB cable on FRONT IO BOARD, please follow below steps to paste USB CABLE ACETATE TAPE.

Step1, USB CABLE ACETATE TAPE align the centerline and parallel to the IO BOARD.

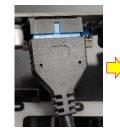

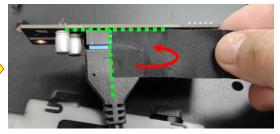

Step2, Winding it parallel the connector.

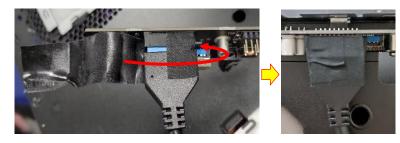



NEW FRONT IO BOARD

Assembly Notice • Please follow the below steps to assemble FRONT IO BOARD.

Step-1 FIO bracket and small card, corresponding hole assembly. Step-2 Assemble the STAND OFF on the MB.








SCREW M3*4L (6.3,2.05) (B) #2*3pcs



Step-3 Assemble the cables*3pcs.

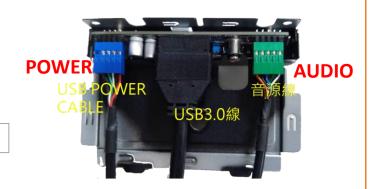

Step-4 Assemble the USB3.0 CABLE on the MB.





Set in iron piece.





FRONT IO BOARD

Step-1 If you use the NEW FRONT IO BOARD








CABLE USB2.0 CRB TO MB



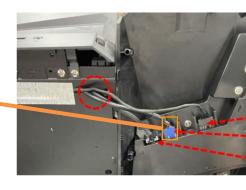


SIDE LED CABLE **USB POWER CABLE** SATA POWER CABLE


NEW FRONT IO BOARD use CABLE USB3.0 FIO TO MB L600

Step-2 If you use the OLD FRONT IO BOARD



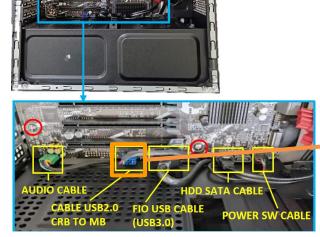

FRONT BEZEL

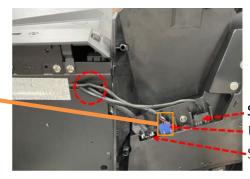

SIDE LED CABLE **USB POWER CABLE** SATA POWER CABLE

OLD FRONT IO BOARD use CABLE USB3.0 FIO TO MB L500



SSD

Disassembly Notice

Please be sure to pull out AC POWER CORD.



Step 1: (SSD1) Release screws *2pcs and take out the SSD HEAR SINK.


Step 2: (SSD1) Remove SSD *1pc.

Step 3: (SSD2) Remove screws *2pcs and take out the M2 SSD SINK.

Step 4: (SSD2) Remove screw *1pc and take out the SSD with TH BRACKET.

Step 5: Take out the SSD from the TH BRACKET.

Screws	QTY	Spec	Torque (kgf-cm)
0	2	G16CH SSD HEAR SINK(WITH SCREW)	2.0±0.2
0	2	PD500TC M2 SSD SINK(WITH SCREW) (M2*0.4,L=5mm)	2.0±0.2
0	1	SCREW M2*7.5L (4.5,0.8) #1	2.0±0.5

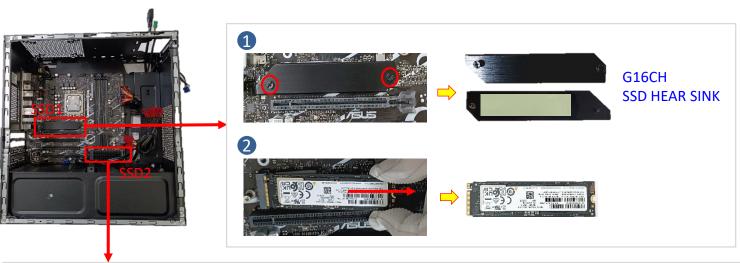



Assembly Notice

Please according to below image to assemble D700TA M2 PAD 25X20X7 & STAND OFF.

SSD1 location



SSD2 location



• SSD2 with TH BRACKET module (Rear)





MAIN BOARD & CPU

Screws

O

O

Disassembly Notice

Please be sure to pull out AC POWER CORD.




Step 1 : Disconnect (yellow mark) connectors *6pcs. Step 2 : Remove screws *8pcs (Red and green mark).

Step 3: Take out the Main Board. Step 4: Release and remove the CPU.

1 Disconnect (yellow mark)



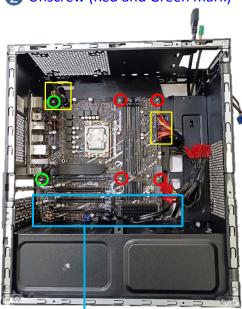


3 Take out Main Board



4 Release and remove the CPU



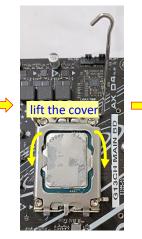

QTY

2


6



Spec

M3*4L (6.3,2.05) (B) #2


#6-32*6L(7.1,2.3) (B) #2

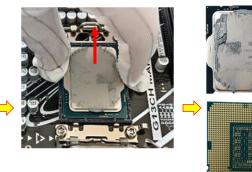


Torque (kgf-cm)

 8.0 ± 0.5


 8.0 ± 0.5

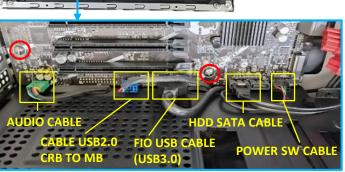

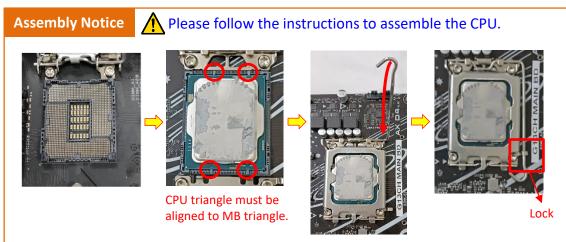



MAIN BOARD

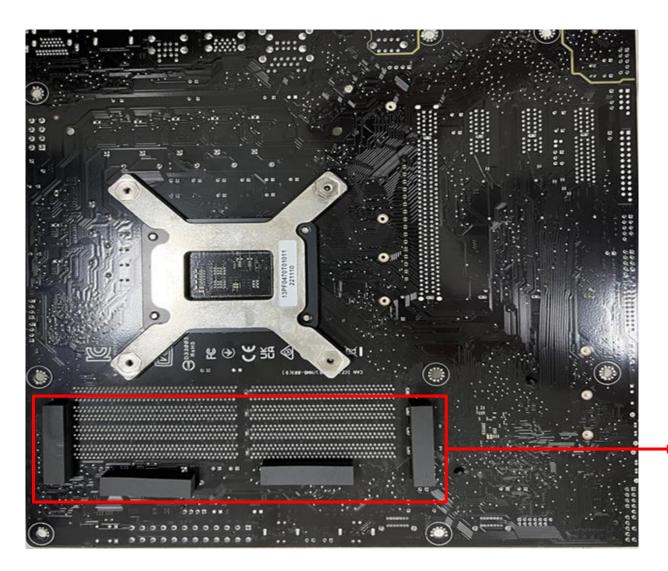

D700TD MB SPONGE L35 W8 T8//L35 W8 T8



WLAN CARD

Disassembly Notice


Please be sure to pull out AC POWER CORD.



- Step 1: Remove screws *2pcs and take out SHIELDING FOR Z690 WIFI with WLAN CARD.
- Step 2: Remove screw *1pc and SHIELDING FOR Z690 WIFI.
- Step 3: Disconnect RF cables*2pcs, remove screw *1pc and WLAN CARD.
- Step 4: Release nut and remove RF cable.





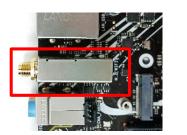



(Rear)





SHIELDING FOR Z690 WIFI

3 Disconnect and remove





4 Release nut and remove

Screws

O

O

10


QTY

2

1


1



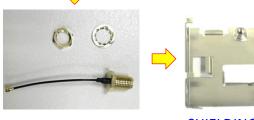

RFCABLE ASSEMBLY SMA/MHF 42MM*2pcs

SHIELDING FOR Z690 WIFI

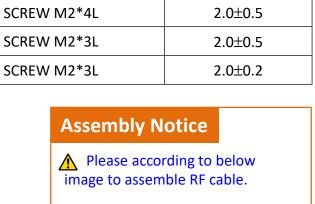

Spec

Torque (kgf-cm)





POWER SWITCH


Disassembly Notice

Please be sure to pull out AC POWER CORD.



Step 1: Push hooks then take out POWER SW CABLE with POWER SWITCH HOLDER from CHASSIS.

Step 2: Push hooks then separate POWER SW CABLE and POWER SWITCH HOLDER.

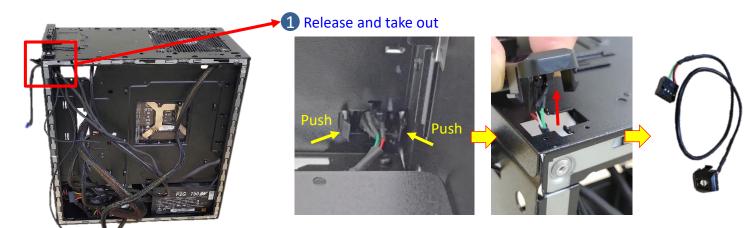

2 Release and separate




Assembly Notice

When need to reuse old POWER SWITCH HOLDER, please make sure the hooks no broken or deformation.

Please according to below image to assemble POWER SW CABLE and POWER SWITCH HOLDER.



Please according to below image to assemble POWER SW CABLE(with HOLDER).

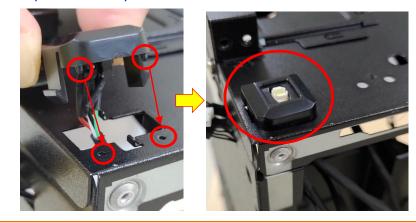



HDD & IO SHIELDING

Disassembly Notice

Please be sure to pull out AC POWER CORD.



Step 1 : Remove screws *4pcs.

Step 2 : Disconnect the connectors *2pcs

Step 3: Take out the HDD and cable.

Step 4: Press and push the IO SHIELDING to remove it.

Screws	QTY	Spec	Torque (kgf-cm)
	4	SCREW #6-32*6.3L (7.3,2.45)(B) B-ZN #2	6.5±0.5


1 Unscrew








Disconnect

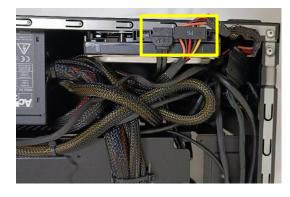

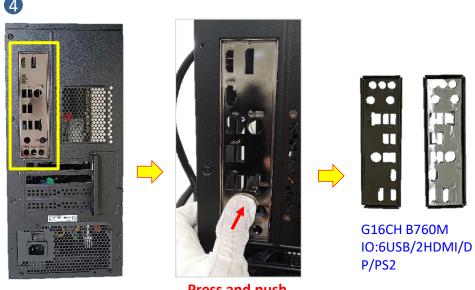



POWER SUPPLY

Disassembly Notice

Please be sure to pull out AC POWER CORD.




Step 1 : Cut the cable ties *7pcs.

Step 2 : Remove screws *4pcs.

Step 3 : Disconnect the connector *1pc & take out the POWER SUPPLY.

Screws	QTY	Spec	Torque (kgf-cm)
	4	SCREW #6-32*6.3L (7.3,2.45)(B) B-ZN #2	8.0±0.5


1 Disconnect

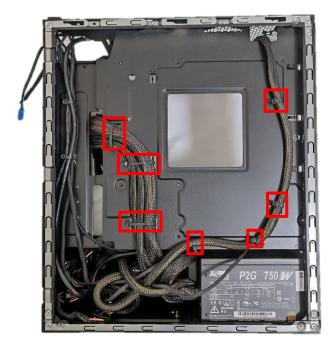





3 Disconnect and take out

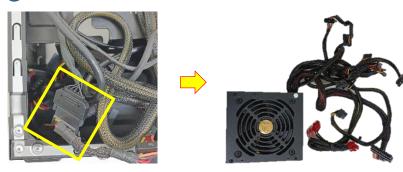



LED BOARD


Disassembly Notice Please be sure to pull out AC POWER CORD.



Step 1: Remove screws *2pcs and then disconnect cables *2pcs.

Step 2: Remove screws *3pcs and then disconnect cable *1pc.

Screws	QTY	Spec	Torque (kgf-cm)
10	2	SCREW M2.5*4L (K) B-ZN NY	2.5±0.2
70	3	SCREW M2.5*4L (K) B-ZN NY	2.5±0.2

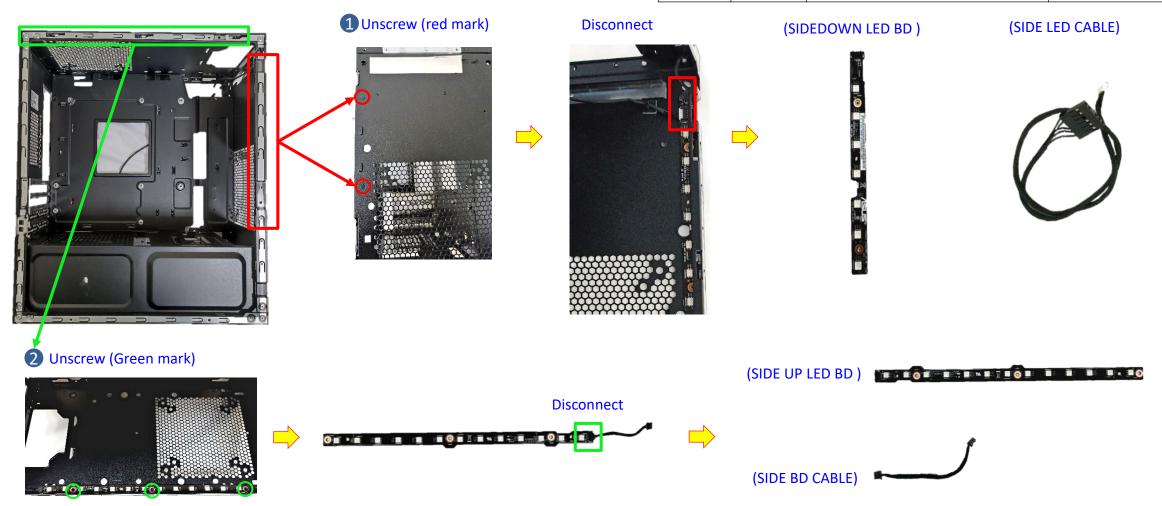



CABLE ASSEMBLY

Assembly Notice



Please according to below image to Tidy up the cables.







