



VG28UQ FW update SOP


1. First to install the ASUS FW update tool_Setup_V0.0.0.3_20211014

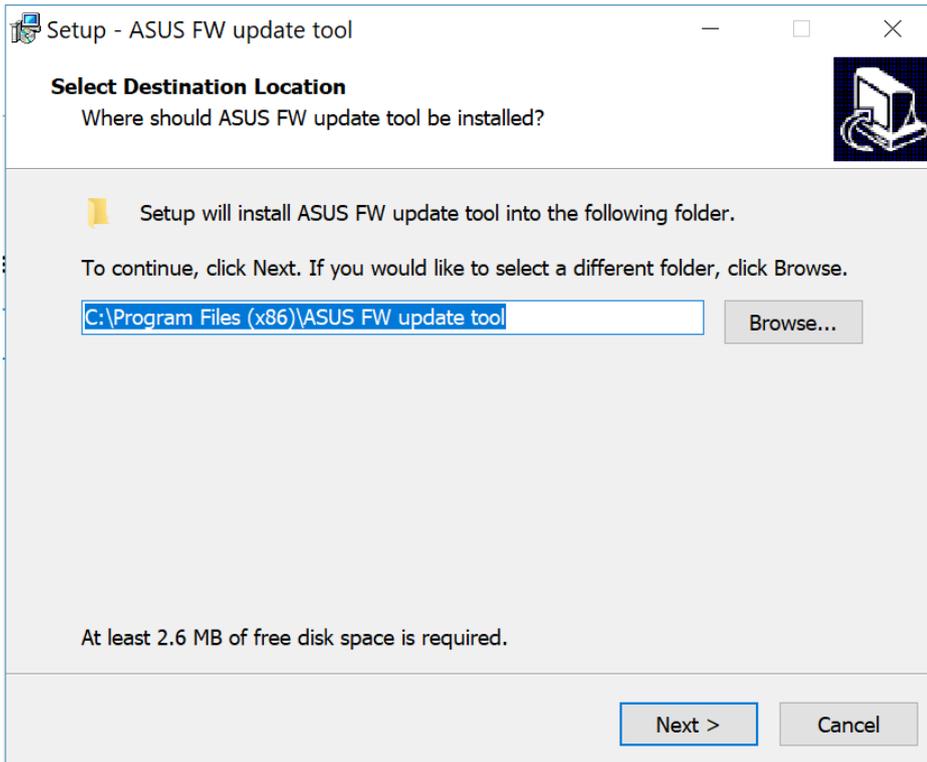

2. After the installed , open the ASUS FW update tool.as below:

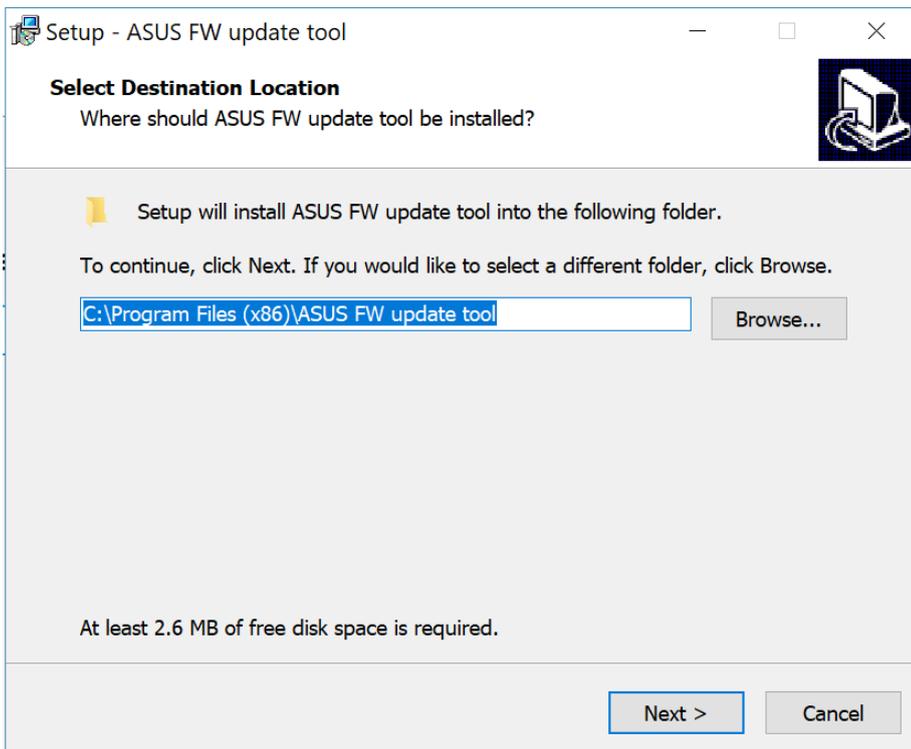


3. Please connect computer /NB to USB3.0 uplink port +HDMI (refer to the picture below).

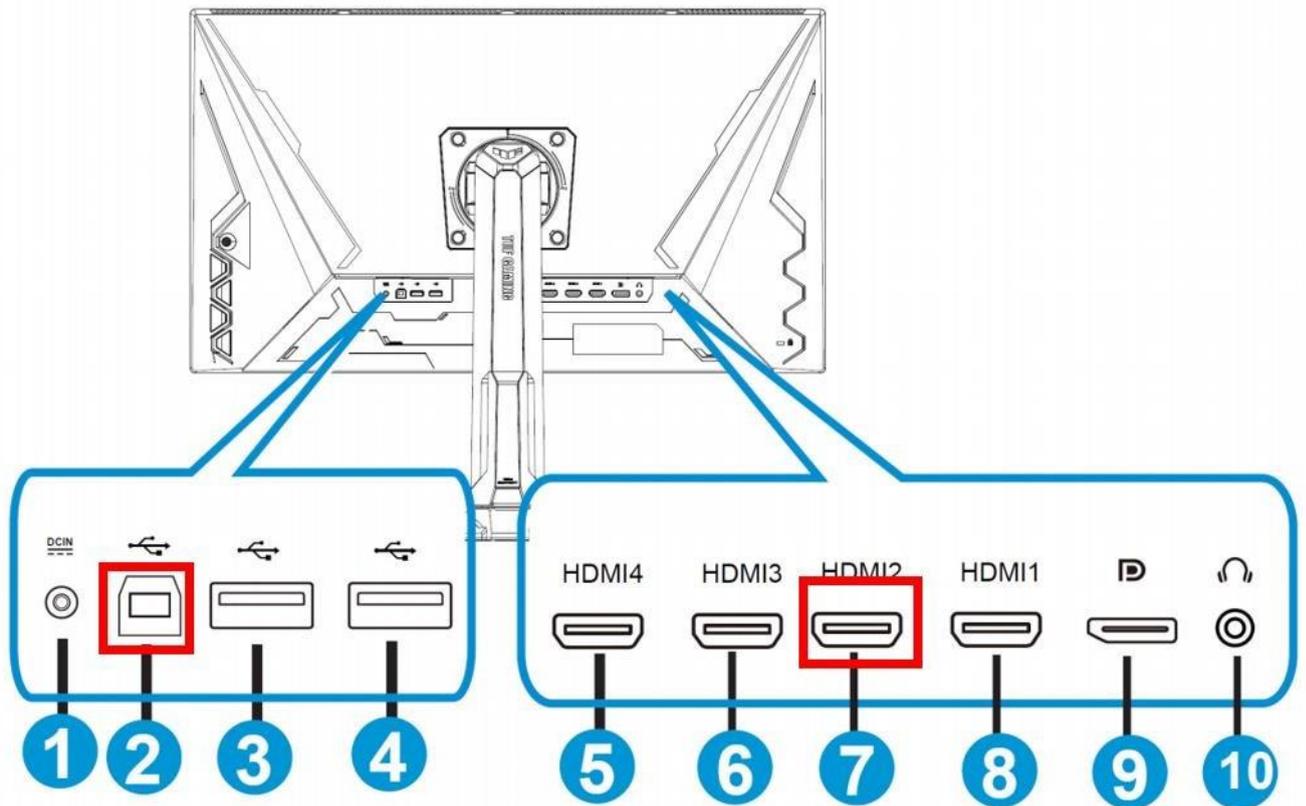


4. open the software and click Refresh to check whether the Device is connected successfully


*connect fail

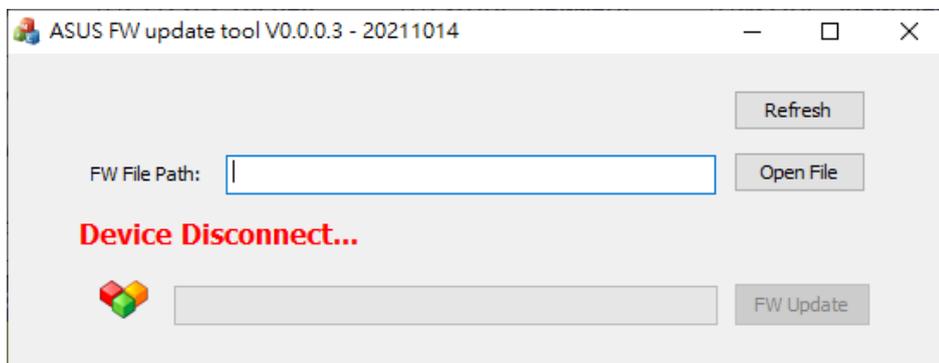


*connect success

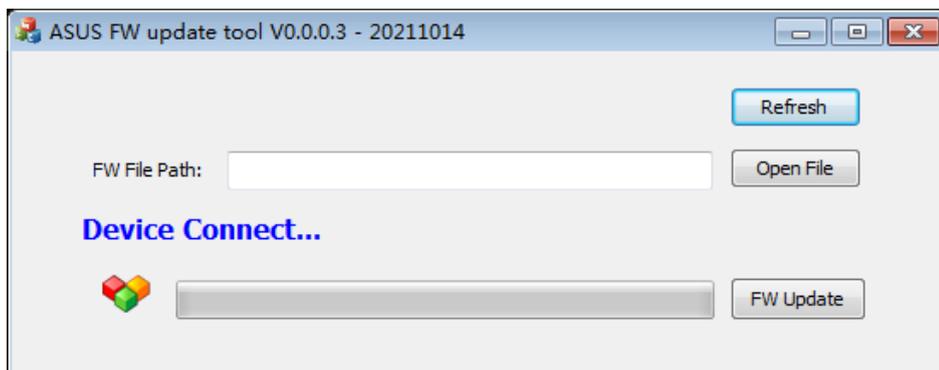


5. click "open file" then to load the FW file as "ASUS_VG28UQL1A_V030.bin"

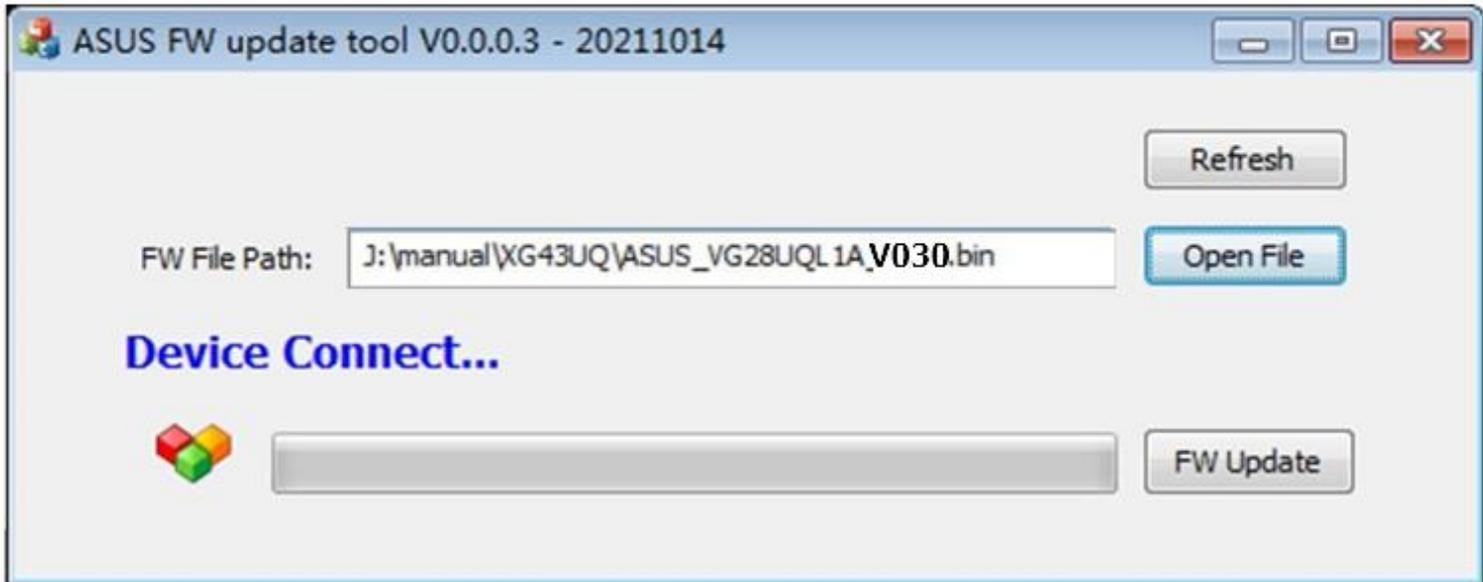

6. click "FW Update" to start the update the FW ,It takes about 10 to 15 minutes.

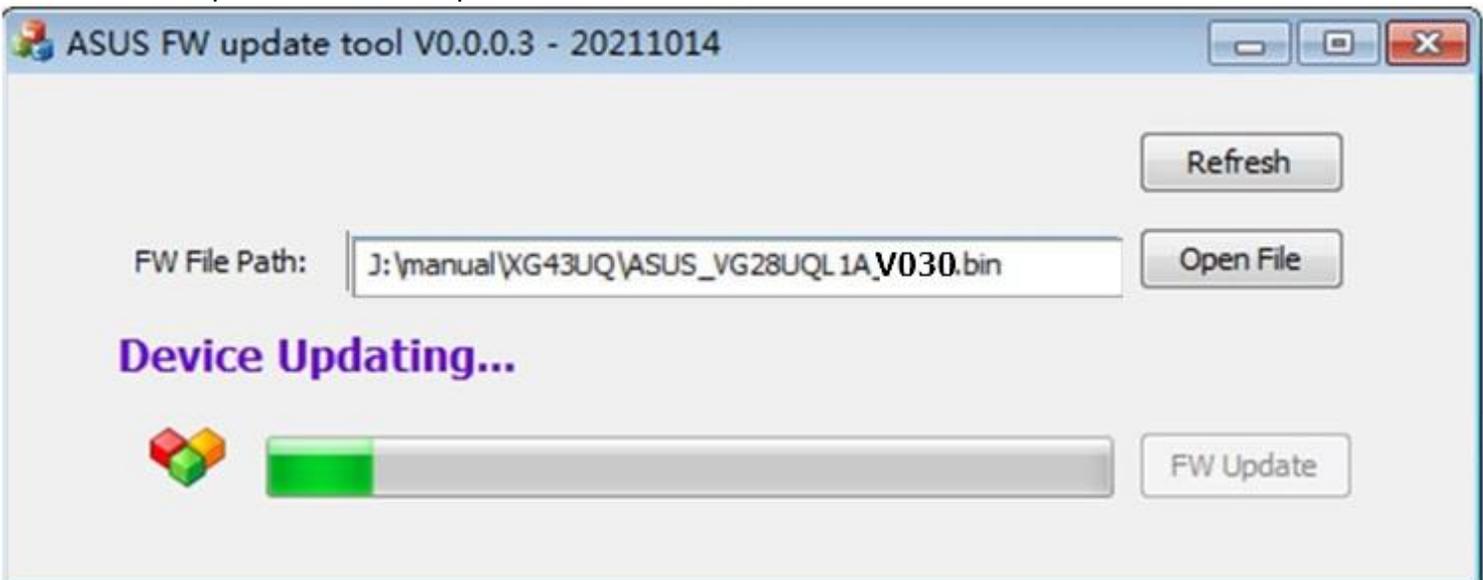

7. If the screen is updated successful, the screen will restart automatically. It is recommended that users reset the screen again after the screen is restarted.

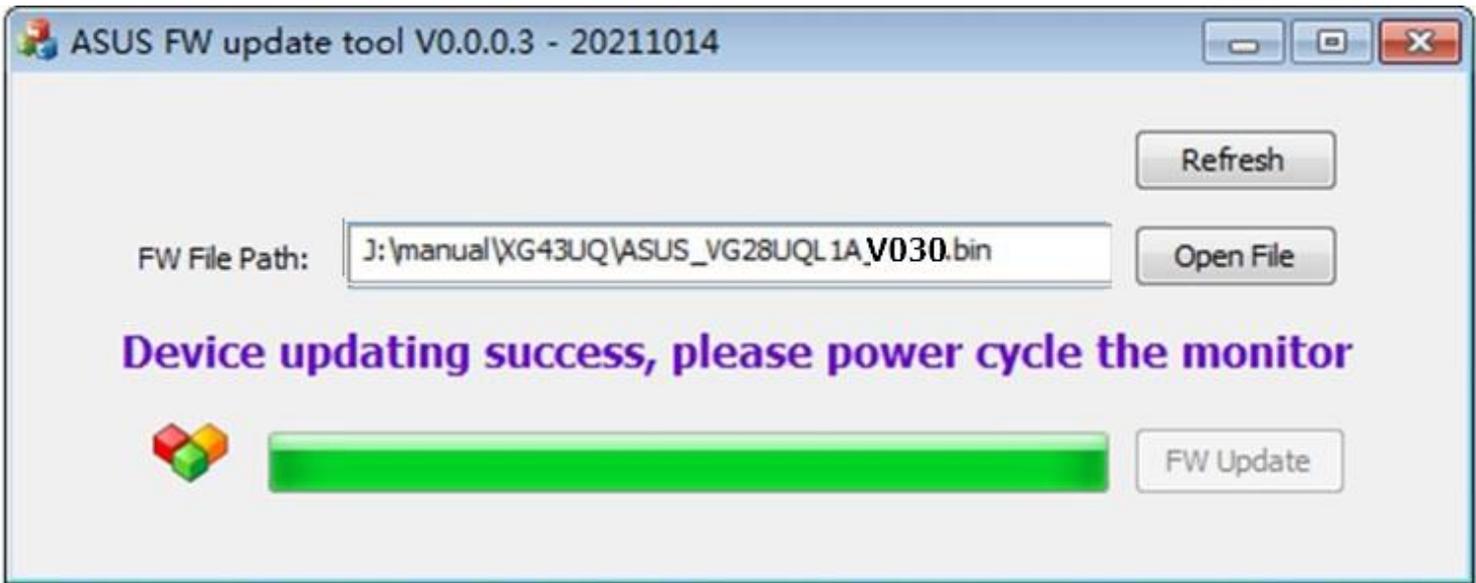

8. The OSD menu displays information to check whether V030 is successfully updated



