

 
1. Prepare a USB-A to USB-B cable, USB-A is connected to the computer; USB-B is connected to Monitor.




2. Download FW bin file  
**V025 : ASUS\_PG48UQ\_V025.bin**
3. Install ASUS VLI FW update tool\_Setup\_V0.0.0.8.exe
4. Execute **ASUS FW update tool**




5. Open the FW bin file just downloaded, and then click “FW Update” to update. It will take about 7~8 minutes.

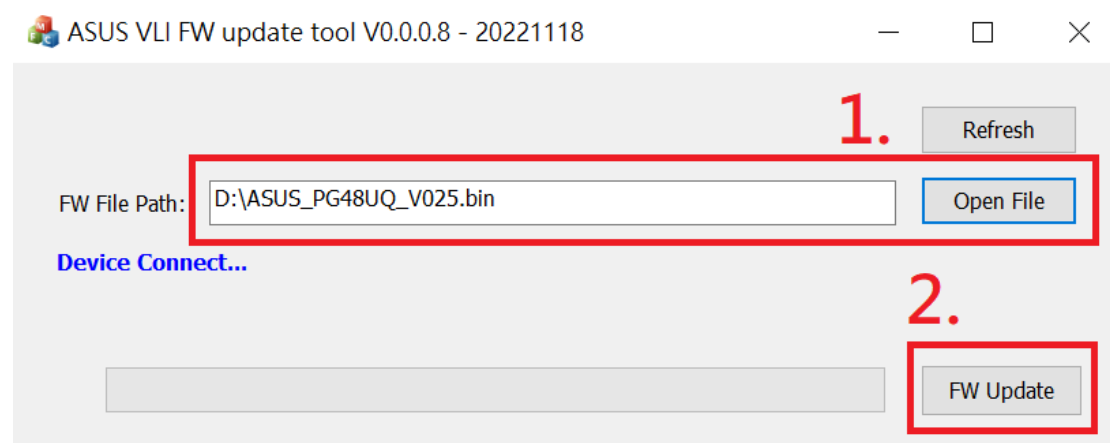

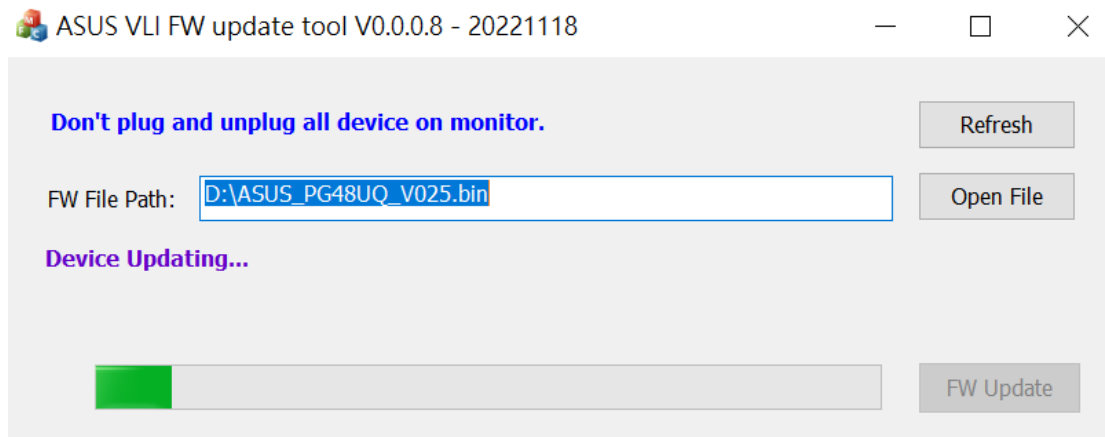

 - After the update is complete, the monitor will automatically shut down and restart.

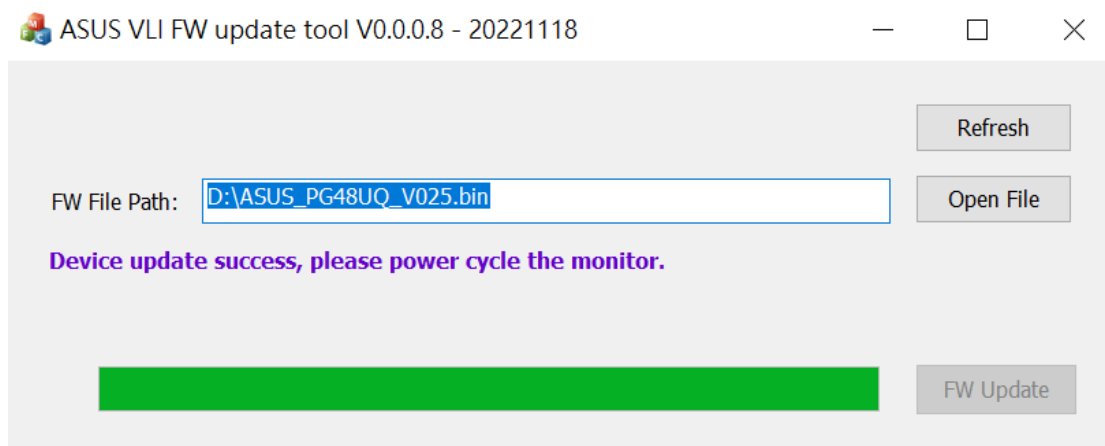

- Check the FW version on OSD menu after the update.  
(Press "System Setup", then click "Information")

