



PadfoneTM Station

Quick Start Guide

E7191

First Edition
March 2012

Copyright © 2012 ASUSTek Computers, Inc.

All Rights Reserved.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUS Telecom ("ASUS").

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS AND THE LIKE), EVEN IF ASUS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES ARISING FROM ANY DEFECT OR ERROR IN THIS MANUAL OR PRODUCT.

SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS. ASUS ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Thank you for purchasing another cool ASUS product!

Before you start, ensure that you have read all the safety information and operating instructions in the **Important Notices** bundled with your PadFone to prevent injury or damage to your device.

NOTE: This bundled Quick Start Guide is for reference only and is subject to change without prior notice. For the latest updates and more detailed information, please visit www.asus.com.

Getting to know your PadFone Station

Overview

- 1 Camera lens
- 2 Light sensor
- 3 Touchscreen display



Overview

- 4 PadFone door latch
- 5 LED indicator
- 6 Power key
- 7 Air vent
- 8 PadFone bay
- 9 PadFone flashbulb hole
- 10 PadFone camera hole
- 11 Speaker
- 12 Audio jack
- 13 Volume key
- 14 Microphone
- 15 Hinge holes
- 16 40-pin USB port




Charging your PadFone Station

We strongly recommend that you charge your PadFone Station fully before you use it with your PadFone.

To charge your PadFone Station:

1. Connect the power plug into the USB charger. Ensure that the power plug is attached securely in place.
2. Connect the USB connector into the USB charger's USB port.
3. Connect the micro USB connector into your PadFone Station.
4. Insert the power plug into a wall socket.

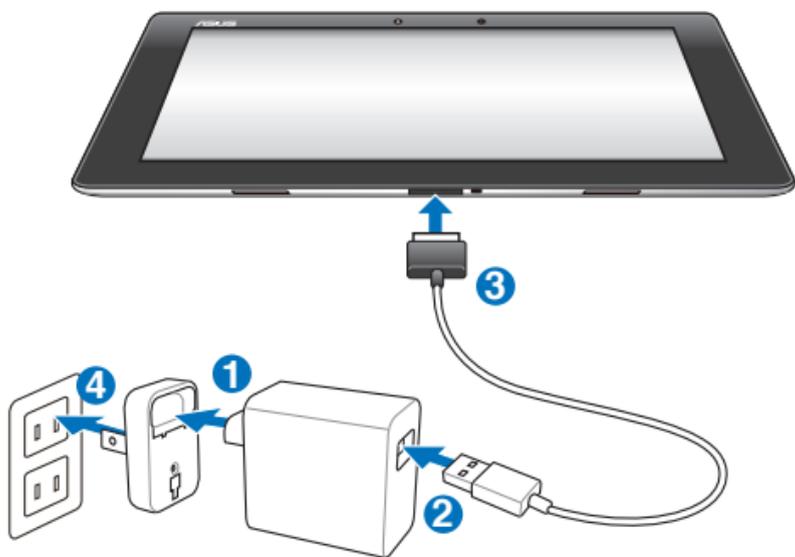

CAUTION! Double-check the connections and ensure that the power plug is securely attached to the AC Adapter to prevent overheating and damage to the cables, adapter, or device.

IMPORTANT The 40-pin connector/port is used for charging your PadFone Station only. It can not be used for transferring data.


NOTICE

- Use only the power adapter that comes with your device. Using a different power adapter may damage your device.
 - Using the provided USB charger and USB cable to connect your PadFone Station to a power outlet is the best way to charge your PadFone Station.
 - The input voltage range between the wall outlet and this adapter is AC 100V - 240V; the output voltage through the 40-pin USB cable is DC 15V, 1.2A.
-


Inserting your PadFone into the PadFone Station

To insert your PadFone into your PadFone Station:

1. Hold your PadFone Station upside-down then push the latch to open the PadFone bay.

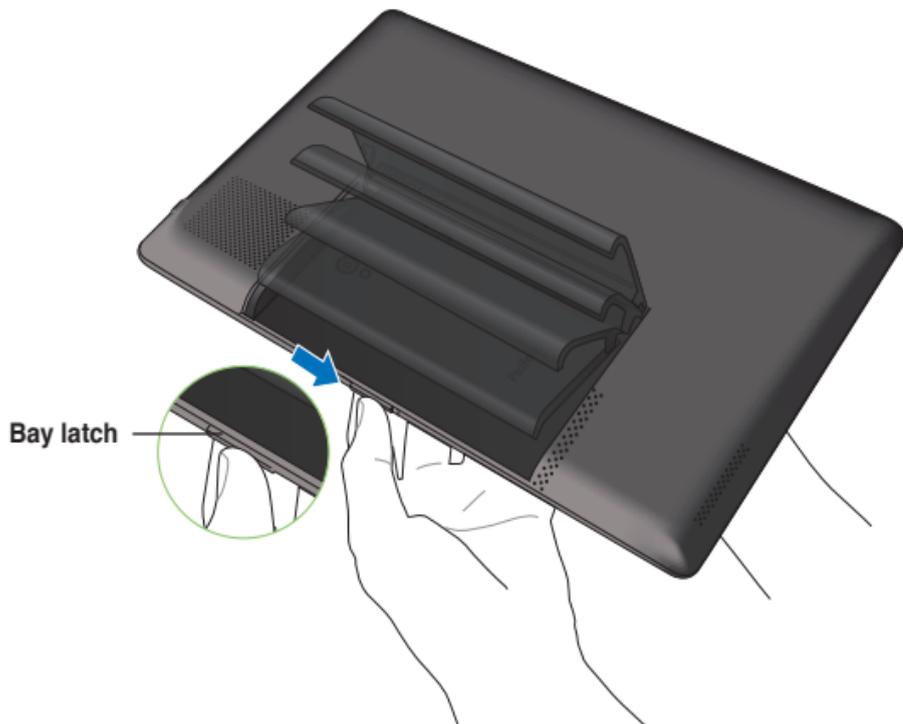

- Align your PadFone into the PadFone bay sliding track. Orient your PadFone so that it matches the silhouette guide in the bay.

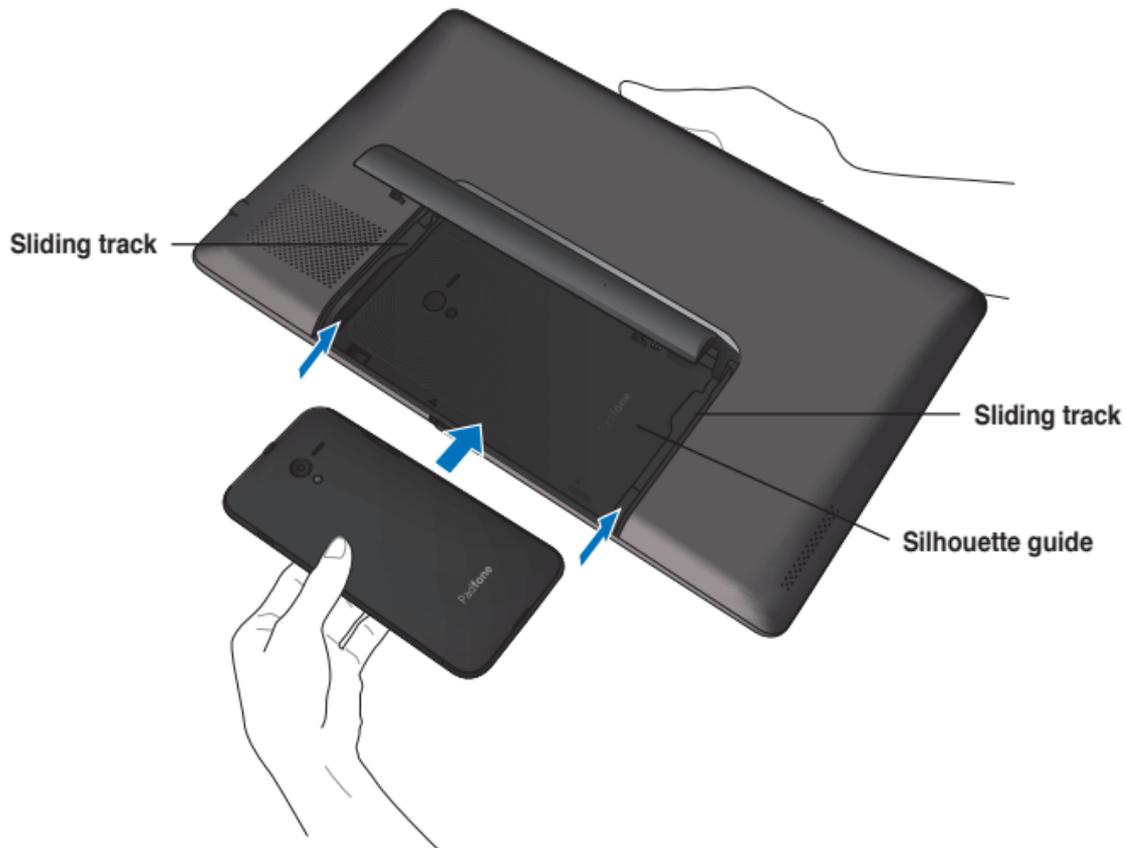

3. Firmly insert your PadFone into the PadFone Station until the PadFone is secured in place.

NOTE Your PadFone Station briefly vibrates when the connection is secured.



4. Close the PadFone bay door and ensure that the latch firmly locks in place.



After successfully inserting your PadFone into the PadFone Station, Android automatically adjusts the screen and apps to work on a tablet environment.

If an app was designed for a smaller screen, a zoom control will appear beside the clock.


NOTE: The following screen is for reference only and may appear differently from your device.



Removing your PadFone from the PadFone Station


To remove your PadFone from the PadFone Station:

1. Hold your PadFone Station upside-down then push the bay latch to open the PadFone bay.

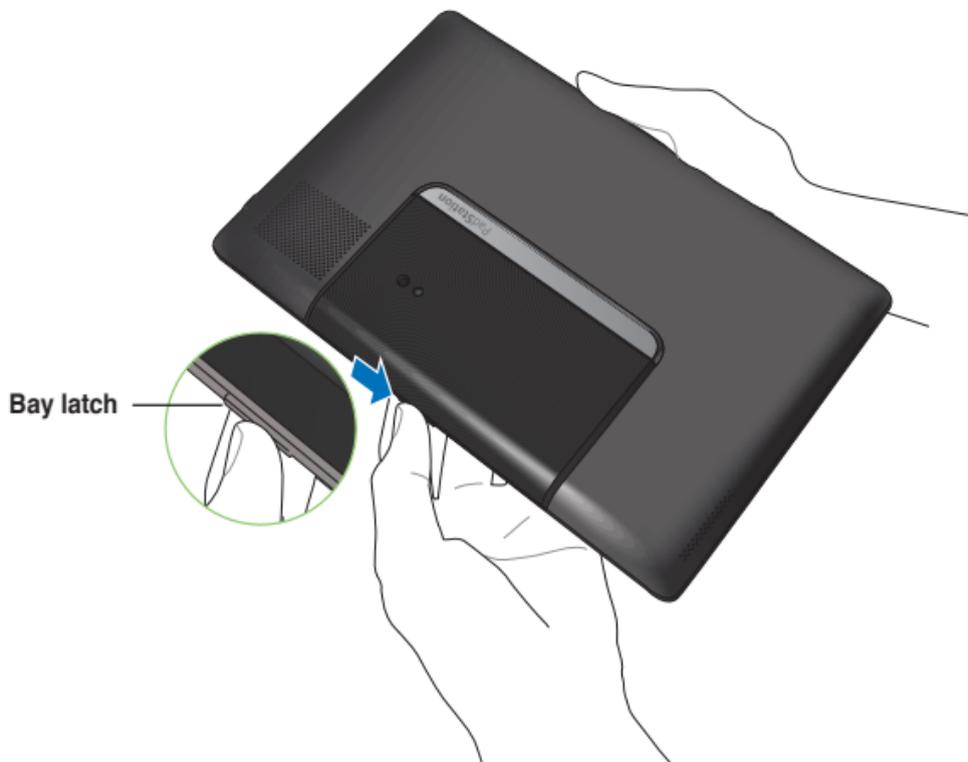

2. Push the PadFone bay door up to a ninety-degree (90°) angle until the PadFone detaches completely from the connectors.

IMPORTANT: Pushing the PadFone bay door up to a ninety-degree (90°) angle allows the specially designed push levers to eject the PadFone properly from the PadFone Station.

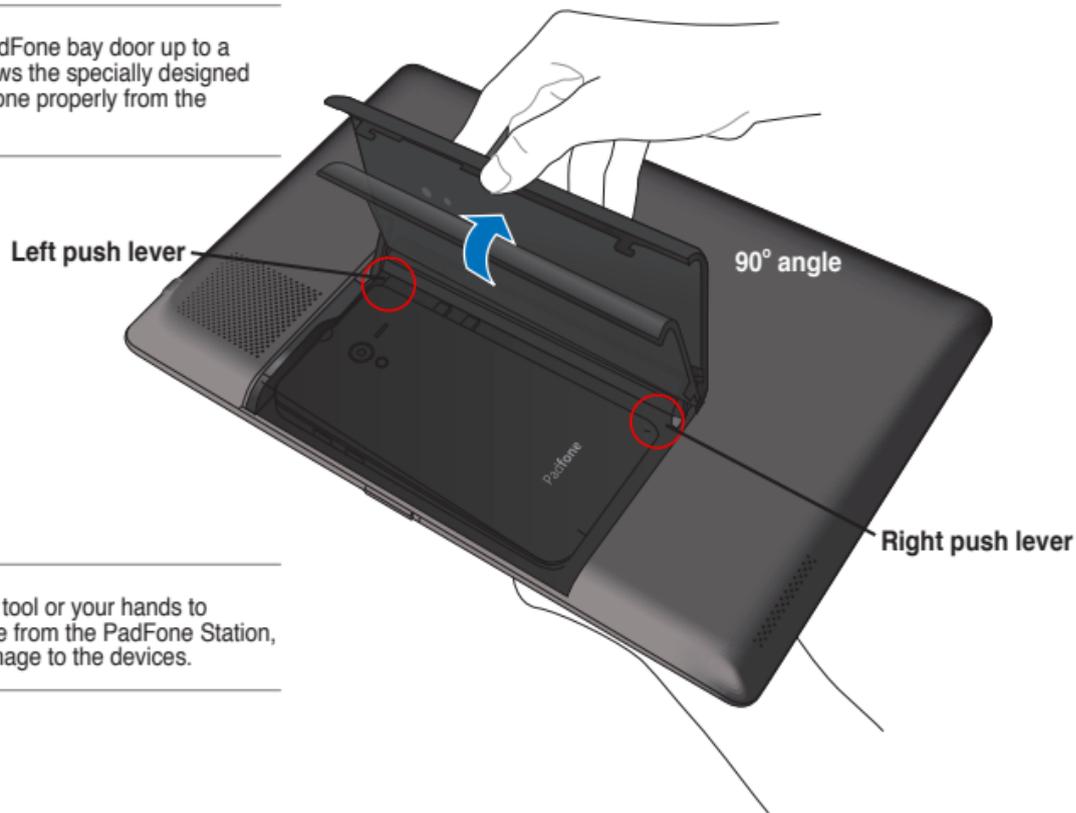

WARNING: DO NOT use any tool or your hands to manually remove the PadFone from the PadFone Station, to prevent injury to self or damage to the devices.

3. Gently remove the PadFone out (A) then close the PadFone bay door (B).





15060-05S0000