

ASUS Wireless Console

User's Guide



Contents

Chapter 1	ASUS	Wireless Console	.1
1.1	Introdu	action	.1
1.2	How to	o use ASUS Wireless Console	.1
1	.2.1	User Interface Definition	.1
1	.2.2	Toggle sequence	.2



Chapter 1 ASUS Wireless Console

1.1 Introduction

ASUS Wireless Console is a utility to provide an on-screen selection interface for the built-in wireless LAN and/or Bluetooth.

After installing ASUS Wireless Console, one could use the function key to turn the built-in wireless LAN and/or Bluetooth ON or OFF.

1.2 How to use ASUS Wireless Console

1.2.1 User Interface Definition

Wireless LAN and Bluetooth built-in

Selection	Main UI display	OSD	Tray icon
Wireless LAN + Bluetooth	WHELEAS LAST - BLACTOON	WLAN & Bluetocth ON	8
Wireless LAN	WIRLANS LAN	Wireless LAN ON	3
Bluetooth		Bluetooth ON	*
X(OFF) Wireless LAN + Bluetooth	WIRELESS LAN + BLUETOOTH	WLAN & Bluetooth OFF	%



Selection	Main UI display	OSD	Tray icon
Wireless LAN	WIRELESS LAN	Wireless LAN ON	0
	WIRELESS LAN	Wireless LAN OFF	9
			-
Selection	Main UI display	OSD	Tray icon
Selection Bluetooth	Main UI display	OSD Bluetooth ON	Tray icon

With only wireless LAN built-in or only Bluetooth built-in

Hold [Fn] and press [F2] separately to scroll through the selections of wireless LAN and/or Bluetooth.

1.2.2 Toggle sequence

For both wireless LAN and Bluetooth built-in, only wireless LAN built-in and only Bluetooth built-in, the toggle sequence is

