



# CacheVault™ Bracket Kit

## Quick Installation Guide



E13900  
First Edition  
February 2018

**Copyright © 2018 ASUSTeK COMPUTER INC. All Rights Reserved.**

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTeK COMPUTER INC. ("ASUS").



ASUS provides this manual "as is" without warranty of any kind, either express or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose. In no event shall ASUS, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of use or data, interruption of business and the like), even if ASUS has been advised of the possibility of such damages arising from any defect or error in this manual or product.

Specifications and information contained in this manual are furnished for informational use only, and are subject to change at any time without notice, and should not be construed as a commitment by ASUS. ASUS assumes no responsibility or liability for any errors or inaccuracies that may appear in this manual, including the products and software described in it.

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

# Package contents

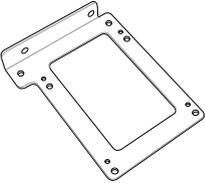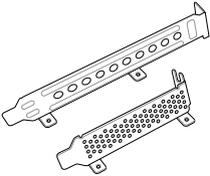	
ASUS CVPM clip holder	2 x Brackets (1 x Full-height, 1 x Low-profile)
	
3 x Clip holder screws	2 x Bracket screws



If any of the above items is damaged or missing, contact your retailer.

# 1.1 Installing the CacheVault™ to ASUS server systems

Some ASUS server systems have a specially designed space for installing the CacheVault™ Power Module, allowing you to make use of all your system's PCIE expansion slots. If your server system does not have a specially designed space, please refer to **1.2 Installing the CacheVault™ to a PCIE slot** for more details.




For more details on which ASUS server systems supports this feature, please refer to <https://www.asus.com/support/> for more details.

1. Remove the riser card bracket from your server system, then place it on a flat and stable surface. Locate the three screw holes for the LSI® CVPM (CacheVault™ Power Module) clip.




For more details on how to uninstall the riser card bracket, please refer to the user manual that came with your server system.

2. Align the three screw holes on the LSI® CVPM clip with the three screw holes on the riser card bracket, then secure the clip with the clip holder screws.

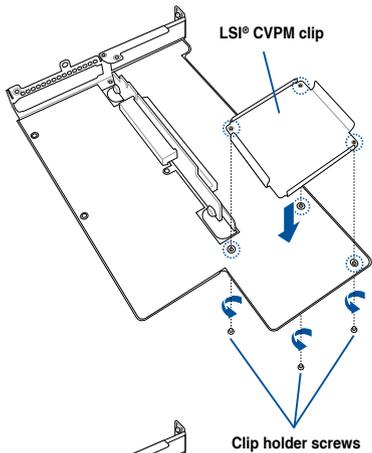


3. Install the CacheVault™ Power Module into the LSI® CVPM clip.

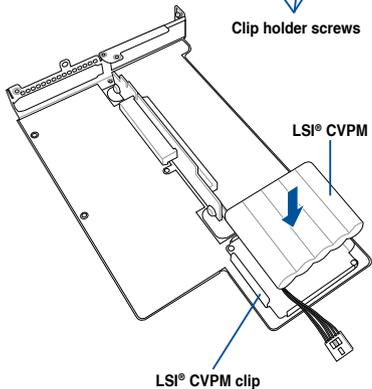


## 1.2 Installing the CacheVault™ to a PCIe slot

To install the CacheVault™ Power Module into your server system, you can use the CacheVault™ Bracket kit to install the CacheVault™ Power Module into a PCIe expansion slot. Follow the steps below to install the CacheVault™ Power Module and CacheVault™ Bracket kit into your server system.

1. Align the three screw holes on the LSI® CVPM (CacheVault™ Power Module) clip with the three screw holes on the ASUS CVPM clip holder, then secure it with the clip holder screws.

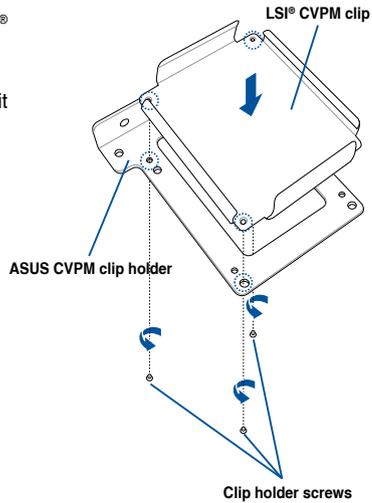


2. Install the CVPM into the LSI® CVPM clip.



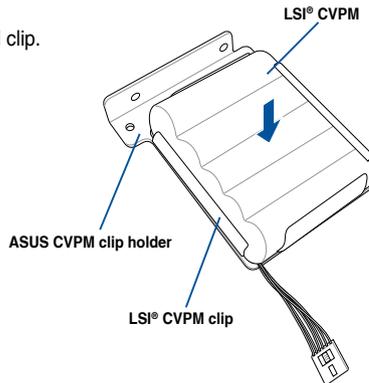


3. Align the ASUS CVPM clip holder with the bracket (A), then secure it with bracket screws (B).

For low-profile expansion slots:

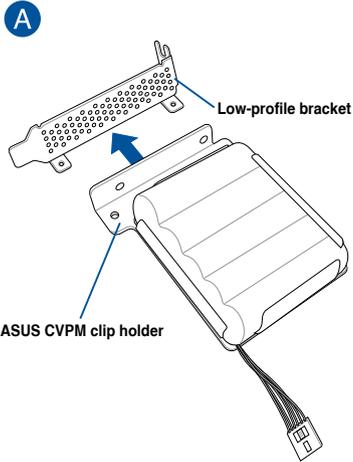

For full-height expansion slots:

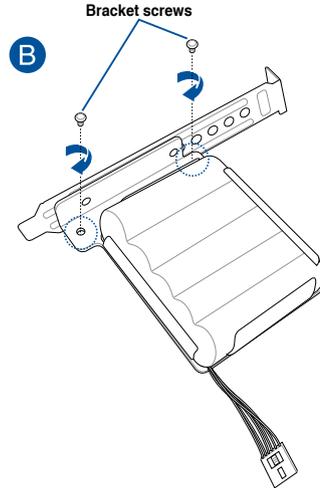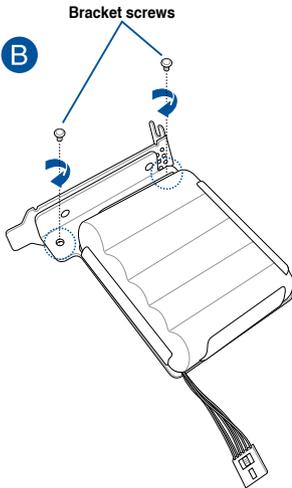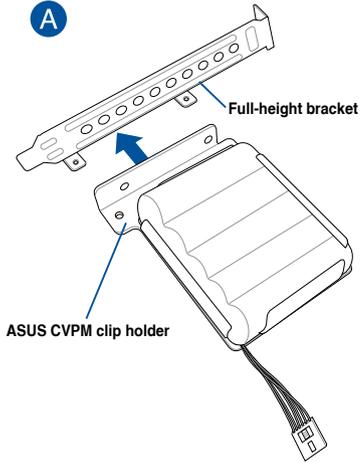

4. Install the CacheVault™ bracket assembly into a PCIe slot in your server system.



---

The illustration shown below is for reference only.

---

