/ISUS
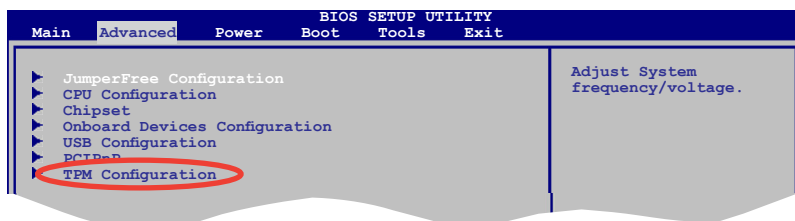
TPM Support

This motherboard comes with a TPM connector which supports a Trusted Platform Module (TPM) system. Below are the updated TPM configurations in BIOS settings.

```
                          BIOS SETUP UTILITY
   Main   Advanced    Power    Boot    Tools    Exit

   ▶    JumperFree Configuration                  Adjust System
   ▶    CPU Configuration                         frequency/voltage.
   ▶    Chipset
   ▶    Onboard Devices Configuration
   ▶    USB Configuration
   ▶    PCIPnP
   ▶    TPM Configuration
```

> ⚠ Take caution when changing the settings of the **Advanced** menu items. Incorrect field values can cause the system to malfunction.

TPM Configuration

The items in this menu allow you to set the TPM (Trusted Platform Module) features. Select an item then press <Enter> to display the configuration options.

> 🖊 The TPM Configuration item appears only when a TPM module is installed in this motherboard.

TPM Support [Yes]

Allows you to enable or disable TPM setting. Configuration options: [Yes] [No]

> 🖊 The following items appear only when you set the TPM Support item to [Yes].

TPM Enable / Disable Status [No State]
The item is not configurable.
TPM Owner Status [No State]
The item is not configurable.