



## **SOP for updating PA279CV FW via USB**


1. Prepare a USB Flash Drive with format FAT/FAT32/NTFS.

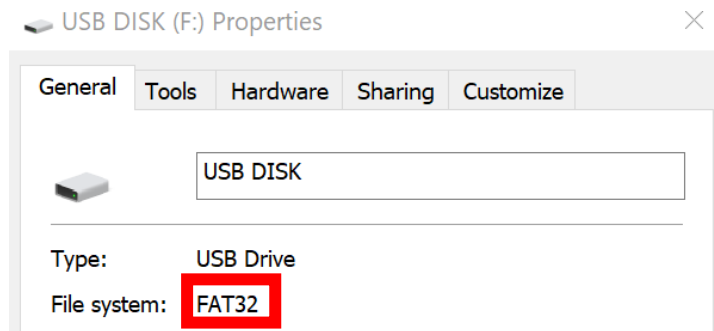

2. Add "ASUS\_PA279CV.bin" file to the root directory of USB Flash Drive. Note: Do not change the name of bin file.

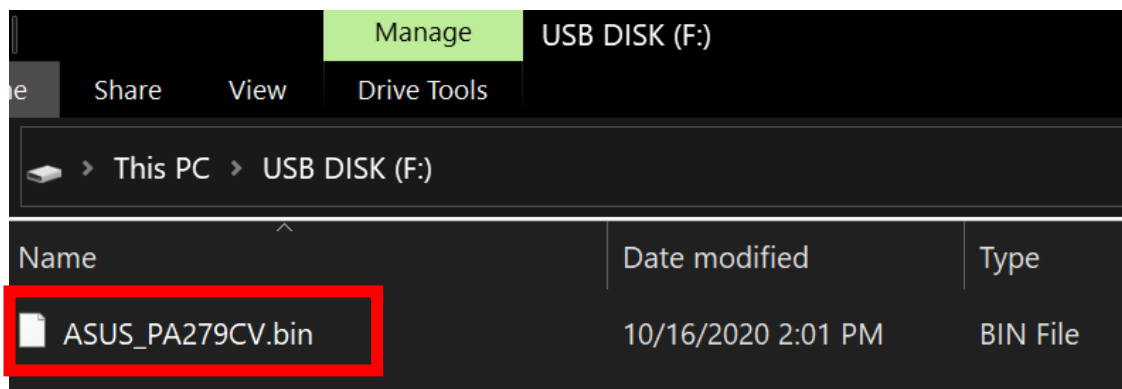


3. Connect the USB Flash Drive to the PA279CV USB-A port that is marked in the picture below.

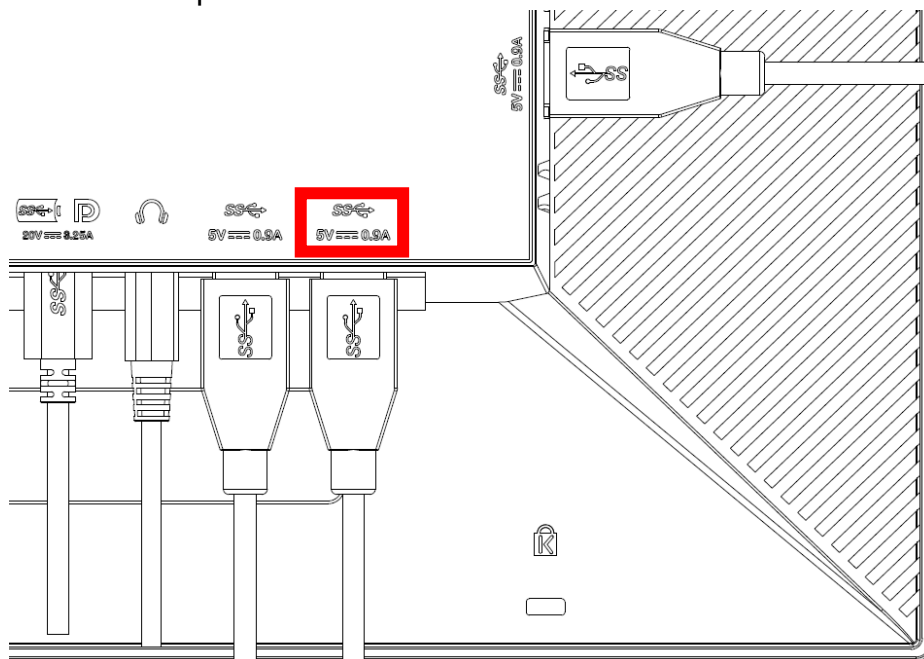


4. Connect PA279CV DP/HDMI/USB-C port to PC.
5. To turn off PA279CV AC switch.



6. Long press the 4<sup>th</sup> button from the right.

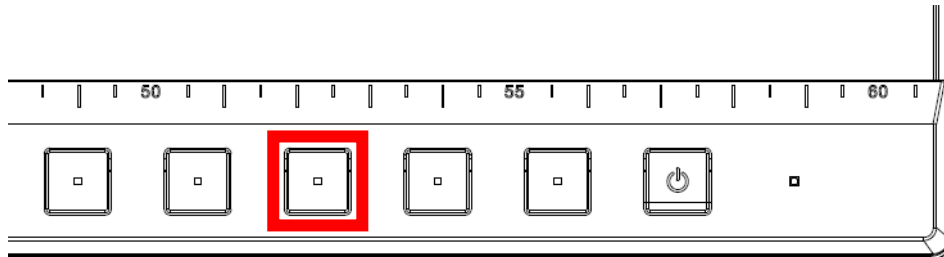


7. To turn on PA279CV AC switch.
8. Release the 4<sup>th</sup> button when power indicator ON and ASUS logo is showed on the screen.
9. Press the 2<sup>nd</sup> button from the right to display and enter the OSD menu.

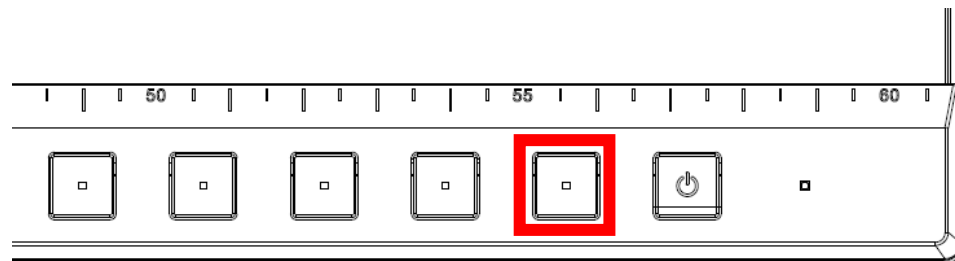


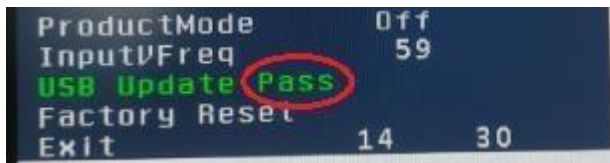
10. Press ▲ to select the “F”.



11. Press ✓ to enter the factory menu OSD.
12. Press ▼ to select the “USB Update”.

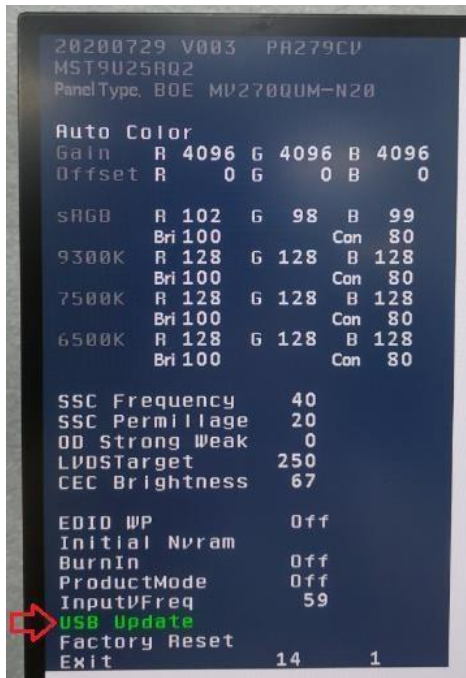


13. Press  the update the FW update. The update takes about 110 seconds.
14. If the update is successful, the USB Update item will show Pass. If the update is fails, the USB Update item will



show Fail.

15. To turn off & on PA279CV AC switch.
16. To turn off & on PA279CV DC Power button.

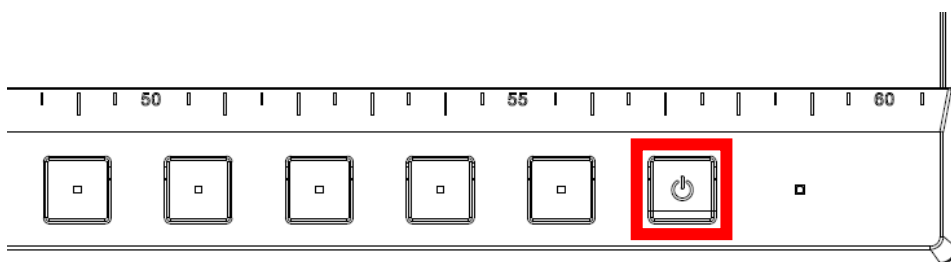

\*If you turn on PA279CV and encounter that PA279CV display various colors and black and white flicker phenomenon, it the normal phenomenon, please try the step 15 & 16 again and it will disappear.

17. Enter OSD Menu→System Setup→to execute "All Reset".
18. Enter OSD Menu→System Setup→Information, to check FW version is the latest version.

