King Slide

1 Accessory Content and Usage

- Make sure the spec of rack hole and find the suitable pins from accessory bag.
- The default usage of the rail. When using in 9.5mm square rack hole, install 2 pcs screw G and 1pc screw F on the front bracket, 2 pcs screw G on the rear bracket.
- **②** When using in ø7.1 round hole rack, please remove all the screws on the front and rear brackets. Replace them by screw C
- 3 When using in #10-32thread hole rack, please remove all the screws on the front and rear brackets. Replace them by screw D

Screw Sack				
ITEM	NAME	SPEC		
Α	♦ ☐ Inner rail	M4x4L-P0.7		
В	♦ □ Inner rail	#6-32x4L		
С	⊕ □□ For 7.1 Round Hole	Round Hole pin		
D	For #10-32 Thread Hole	#10-32x13L		
Е	⊕ (For Shipping	M5x20-P0.8		
F	Extened Nut.For Shipping	M5x13.5L - P0.8		


'		Extende Nat.1 of Onlipping	WISK 15.5E - 1 0.0	
Pre-installed				
ITEM		NAME	SPEC	
G		For 9.5 Square Hole	Square Hole Pin	


Pull tab forward and

take out inner rail


❖If chassis with thumb screw, please use screw F.If chassis without thumb screw, no need to use screw F.








Install the inner rail onto the chassis.

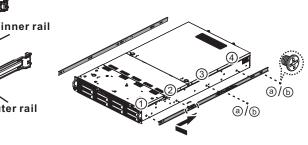










1 Please press the rear bracket before installation.

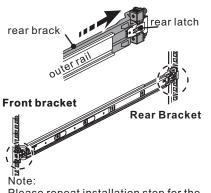

Please repeat installation step for the other side.

Square Hole **0** → 2 → 3 → 4 → 5 Rear bracket

outer rail










Round Hole 0⇒0⇒8







Detach Backet from Rack Post







- 4) Insert the chassis to the rack to complete the installation.
 - Ensure ball bearing retainer is located at the front of the outer rail.
 - 2 Insert the chassis into outer rails.

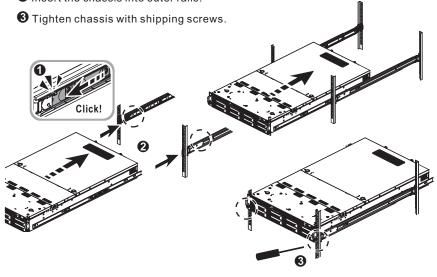

Remove the chassis from rack

- 1 2 Loosen shipping screw to pull out chassis.
- (3) (4) Press the disconnect tab forward to remove chassis.

