



EBS-P300W Series

Embedded Computer

User Manual

E22083

First Edition

November 2023

COPYRIGHT INFORMATION

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTeK COMPUTER INC. ("ASUS").

ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS AND THE LIKE), EVEN IF ASUS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES ARISING FROM ANY DEFECT OR ERROR IN THIS MANUAL OR PRODUCT.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS. ASUS ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.

Copyright © 2023 ASUSTeK COMPUTER INC. All Rights Reserved.

LIMITATION OF LIABILITY

Circumstances may arise where because of a default on ASUS' part or other liability, you are entitled to recover damages from ASUS. In each such instance, regardless of the basis on which you are entitled to claim damages from ASUS, ASUS is liable for no more than damages for bodily injury (including death) and damage to real property and tangible personal property; or any other actual and direct damages resulted from omission or failure of performing legal duties under this Warranty Statement, up to the listed contract price of each product.

ASUS will only be responsible for or indemnify you for loss, damages or claims based in contract, tort or infringement under this Warranty Statement.

This limit also applies to ASUS' suppliers and its reseller. It is the maximum for which ASUS, its suppliers, and your reseller are collectively responsible.

UNDER NO CIRCUMSTANCES IS ASUS LIABLE FOR ANY OF THE FOLLOWING: (1) THIRD-PARTY CLAIMS AGAINST YOU FOR DAMAGES; (2) LOSS OF, OR DAMAGE TO, YOUR RECORDS OR DATA; OR (3) SPECIAL, INCIDENTAL, OR INDIRECT DAMAGES OR FOR ANY ECONOMIC CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), EVEN IF ASUS, ITS SUPPLIERS OR YOUR RESELLER IS INFORMED OF THEIR POSSIBILITY.

SERVICE AND SUPPORT

Visit our multi-language website at <https://www.asus.com/support/>

Contents

About this manual.....	5
Conventions used in this manual.....	6
Package contents	7

Chapter 1: Getting to know your Embedded Computer

1.1 Features	10
1.1.1 Front view	10
1.1.2 Rear view	13
1.1.3 Right view	15
1.1.4 Left view	16
1.2 Motherboard Overview	17
1.2.1 Motherboard layout.....	17
1.2.2 Onboard jumpers & switches	19
1.2.3 Internal connectors	21

Chapter 2: Using your Embedded Computer

2.1 Getting started	30
2.1.1 Connect the AC power adapter to your Embedded Computer	30
2.1.2 Connect a display panel to your Embedded Computer	33
2.1.3 Connect the USB cable from keyboard or mouse	34
2.1.4 Turn on your Embedded Computer	35
2.2 Turning off your Embedded Computer.....	36
2.3 Putting your Embedded Computer to sleep	36
2.4 Entering the BIOS Setup	36

Chapter 3: Upgrading your Embedded Computer

3.1 Removing the bottom cover	41
3.2 Replacing the bottom cover	42
3.3 Installing an M.2 SSD.....	43
3.4 Installing a wireless card.....	44
3.5 Installing antennas (optional).....	46
3.6 Installing wall mount brackets (optional)	48
3.7 Installing a DIN rail clip (optional).....	50

Chapter 4: Watchdog Timer

4.1 Watchdog Timer implementation	52
4.2 Watchdog Timer flowchart	53
4.3 Watchdog Timer programming	54

Appendix

Safety information.....	58
Setting up your system.....	58
Care during use.....	59
Regulatory notices	60
Service and Support	67

About this manual

This manual provides information about the hardware and software features of your Embedded Computer, organized through the following chapters:

Chapter 1: Getting to know your Embedded Computer

This chapter details the hardware components of your Embedded Computer.

Chapter 2: Using your Embedded Computer

This chapter provides you with information on using your Embedded Computer.

Chapter 3: Upgrading your Embedded Computer

This chapter provides you with information on how to upgrade the memory modules, wireless modules, and hard disk drive / solid state drive of your Embedded Computer.

Chapter 4: Watchdog Timer

This chapter will guide you in implementing and programming the Watchdog Timer to allow you to monitor and manage system reliability.

Appendix

This section includes notices and safety statements for your Embedded Computer.

Conventions used in this manual

To highlight key information in this manual, some text are presented as follows:


IMPORTANT! This message contains vital information that must be followed to complete a task.

NOTE: This message contains additional information and tips that can help complete tasks.


WARNING! This message contains important information that must be followed to keep you safe while performing certain tasks and prevent damage to your Embedded Computer's data and components.

Package contents

Your Embedded Computer package contains the following items:

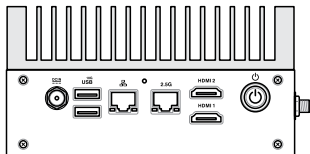


EBS-P300W Series

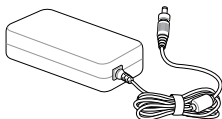

AC power adapter*




Power cord*

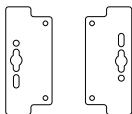

Wall mount kit

Optional item(s)

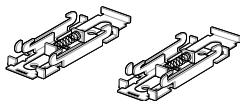

DIN rail clips



Antennas

NOTE:


- *The bundled power adapter and power cord may vary depending on model and country (or region) of sale.
 - Some bundled accessories may vary depending on model. For details on these accessories, refer to their respective user manuals.
 - The device illustration is for reference only. Actual product specifications may vary depending on model.
 - If the device or its components fail or malfunction during normal and proper use within the warranty period, bring the warranty card to the ASUS Service Center for replacement of the defective components.
-

1

***Getting to know your
Embedded Computer***

1.1 Features

1.1.1 Front view

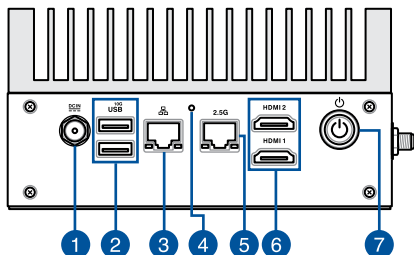

1

DCIN

Power input

The supplied power adapter converts AC power to DC power for use with this jack. Power supplied through this jack supplies power to the Embedded Computer.

WARNING! The power adapter may become warm to hot when in use. Do not cover the adapter and keep it away from your body.

2

**10G
USB**

USB 10Gbps port

The USB (Universal Serial Bus) 10Gbps port provides a transfer rate up to 10 Gbit/s.

3



LAN port

The 8-pin RJ-45 LAN port supports a standard Ethernet cable for 10/100/1000 Mbps connection to a local network.

4

System power LED

The System Power LED lights up red when the system is connected to a power source and lights up green when it is powered on.

5

2.5G 2.5G LAN port

The 8-pin RJ-45 LAN port allows 2.5Gbps Ethernet connection to a Local Area Network (LAN) through a network hub.

6

HDMI 2 HDMI™ port

HDMI 1 The HDMI (High Definition Multimedia Interface) port supports a Full-HD device, such as an LCD TV or monitor, to allow viewing on a larger external display.

HDMI Port	HDMI Spec	Resolution
HDMI 2	HDMI 1.4	Up to 3840 x 2160 @ 30 Hz
HDMI 1	HDMI 2.0	Up to 3840 x 2160 @ 60 Hz


7



Power button

The power button allows you to turn the Embedded Computer on or off. You can use the power button to put your Embedded Computer to sleep mode or press it for four (4) seconds to force shutdown your Embedded Computer.

2.5G LAN port LED indications

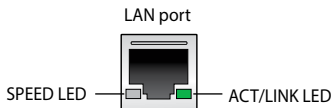


Activity Link LED

Status	Description
Off	No link
Green	Linked
Green (blinking)	Data activity
Green (blinking then steady)	Ready to wake up from suspend mode

Speed LED

Status	Description
Off	10 Mbps connection
Off	100 Mbps connection
Orange	1 Gbps connection
Green	2.5 Gbps connection

1G LAN port LED indications

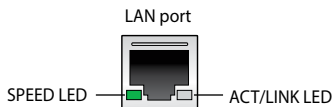


Activity Link LED

Status	Description
Off	No link
Yellow	Linked
Yellow (blinking)	Data activity
Yellow (blinking then steady)	Ready to wake up from suspend mode

Speed LED

Status	Description
Off	10 Mbps connection
Orange	100 Mbps connection
Green	1 Gbps connection

1.1.2 Rear view

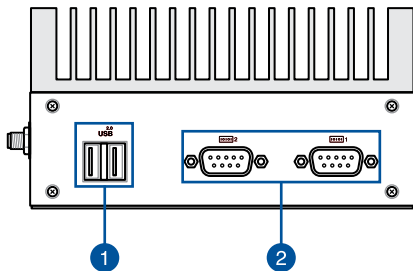

1

USB^{2.0}

USB 2.0 port


The USB (Universal Serial Bus) port is compatible with USB 2.0 and USB 1.1 devices, such as keyboards, pointing devices, flash disk drives, external HDDs, speakers, cameras, and printers.

2

1 Serial (COM) connector


2 The 9-pin DB9 connector allows you to connect RS-232/RS-422/RS-485 devices that have serial ports, such as bar code scanner, modem, or printers. Please refer to the table below for the pin definitions of the different COM connectors.

NOTE: Default set to RS-232.

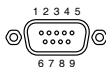

Pin	RS-232	RS-422	RS-485
1	NA	TX-	D-
2	RXD	TX+	D+
3	TXD	RX+	NA
4	NA	RX-	NA
5	GND	GND	GND
6	NA	NA	NA
7	RTS#	NA	NA
8	CTS#	NA	NA
9	NA	NA	NA

1.1.3 Right view

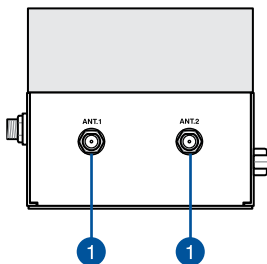


1

ANT. 1 **Antenna hole**

ANT. 2 The antenna hole allows you to connect a wireless antenna to enhance wireless signal reception.

1.1.4 Left view

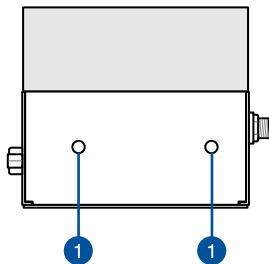

1

DIN rail clip mounting hole


The DIN rail clip mounting hole allows you to secure a DIN rail clip to your Embedded Computer, so you can attach it to a DIN rail system.

1.2 Motherboard Overview

1.2.1 Motherboard layout

The EBS-P300W Series is an Embedded Computer based on a 2.5" motherboard (100 mm x 72 mm). Refer to the table on the next page for the page numbers corresponding to the numbered items.

2.5" motherboard

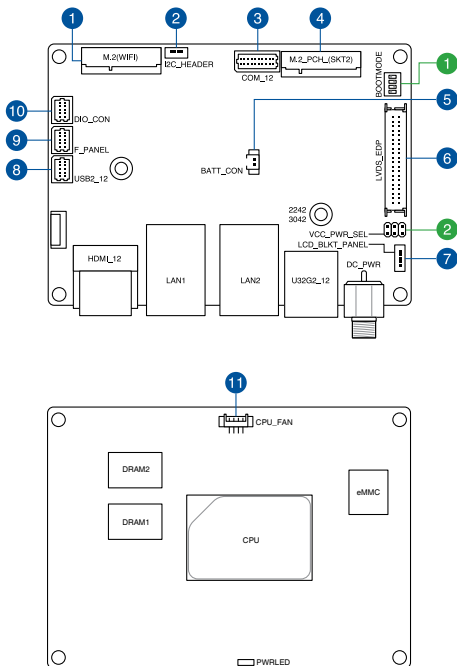


Jumpers/switches		Page
1.	Boot Mode switch	19
2.	Display Panel VCC Power Selection jumper	20

Connectors/slots		Page
1.	M.2 (E-key) slot	21
2.	I2C connector	21
3.	Serial Port connector	22
4.	M.2 (B-key) slot	23
5.	Battery connector	23
6.	LVDS connector	24
7.	Backlight Inverter Power connector	24
8.	USB 2.0 connector	25
9.	Front Panel connector	26
10.	GPIO connector	27
11.	Fan connector	27

1.2.2 Onboard jumpers & switches

1. Boot Mode switch

The Boot Mode switch allows you to configure between different boot modes. Please refer to the table below for the different boot modes.

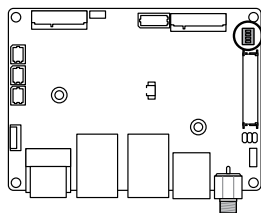

BOOTMODE

BOOTMODE

Clear CMOS setting



Disabled
(default)



Enabled

Auto power on setting



Disabled
(default)



Enabled

LVDS backlight setting




LVDS
backlight high
enabled
(default)



LVDS
backlight low
enabled

2. Display Panel VCC Power Selection jumper (on selected models)


The Display Panel VCC Power Selection jumper allows you to select the voltage for the LVDS panel.

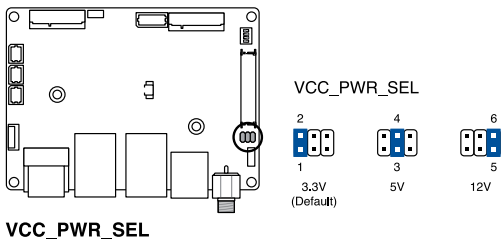

1.2.3 Internal connectors

1. M.2 (E-key) slot


The M.2 (E-key) slot allows you to install an E-key, type 2230 M.2 Wi-Fi module.

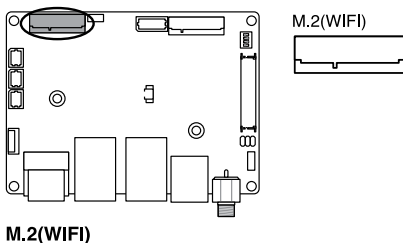

NOTE: The M.2 Wi-Fi module is purchased separately.

2. I2C connector

The I2C (Inter-Integrated Circuit) connector allows you to connect an I2C-compatible IoT security module.

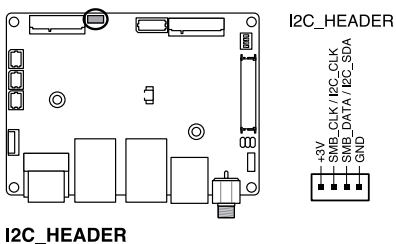


Connector type

Header 1x4p, K6, 1.0mm pitch

3. Serial Port connector

The Serial (COM) Port connector allows you to connect a serial port cable. Connect the serial port cable to this connector, then install the serial port to a slot opening on the system chassis.

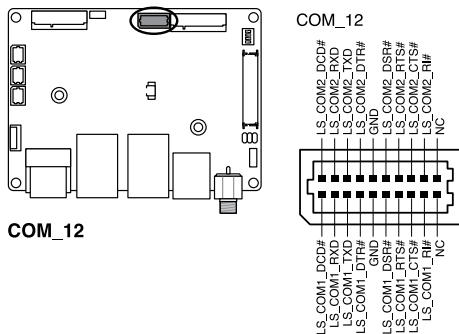

Connector type


BOX header 2x10p, K10, 1.0mm pitch

NOTE:


- The serial port cable is purchased separately.
- **COM1** and **COM2** support RS-232/422/485.

4. M.2 (B-key) slot

The M.2 (B-key) slot allows you to install a B-key (SATA, USB 2.0, and PCIe) type 2242 M.2 device, such as an M.2 SSD module.

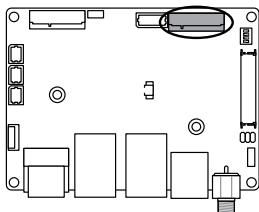

M.2_PCH_(SKT2)

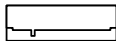


M.2_PCH_(SKT2)

NOTE: The M.2 SSD module is purchased separately.

5. Battery connector

The Battery connector allows you to connect a lithium CMOS battery.

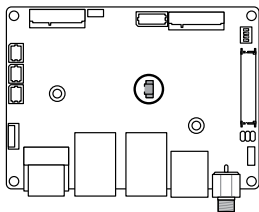


BATT_CON



BATT_CON


6. LVDS connector

The LVDS connector allows you to connect an LCD monitor that supports a Low-voltage Differential Signaling (LVDS) interface.

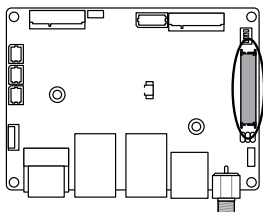

LVDS_EDP

LVDS_EDP

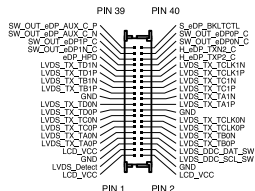


Connector type

WtoB 2x20p, 1.25mm pitch

7. Backlight Inverter Power connector


The Backlight Inverter Power connector allows you to power the backlight inverter on a display panel via a backlight inverter module.

IMPORTANT! The Backlight Inverter Power connector supports a maximum current of 3A.

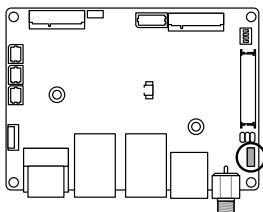

LCD_BKLT_PANEL

LCD_BKLT_PANEL

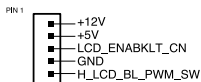


Connector type

Header 1x5p, K6, 1.0mm pitch


8. USB 2.0 connector

The USB 2.0 connector allows you to connect a USB cable for additional USB 2.0 ports. The USB 2.0 connector provides data transfer speeds of up to 480 MB/s connection speed.

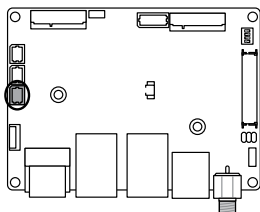

USB2_12

USB2_12

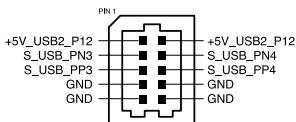

Connector type


BOX header 2x5p, K9, 1.0mm pitch

WARNING! DO NOT connect a 1394 cable to the USB connectors. Doing so will damage the motherboard!

NOTE: The USB 2.0 cable is purchased separately.


9. Front Panel connector

The Front Panel connector supports several chassis-mounted functions.

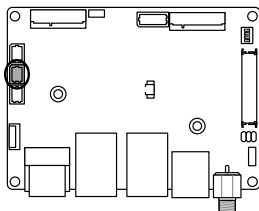

F_PANEL

F_PANEL

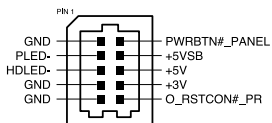

Connector type

BOX header 2x5p 1.0mm pitch

- **System Power LED connector (PLED)**

The 2-pin connector allow you to connect the System Power LED. System Power LED lights up when the system is connected to a power source or when you turn on the system power, blinks when the system is in S3 state, and turns off when in S4 or S5 state.

- **Power Button/Soft-off Button connector (PWRBTN)**


The 2-pin connector allows you to connect the system power button. Press the power button to power up the system, or put the system into sleep or soft-off mode (depending on the operating system settings).

- **Reset button connector (O_RSTCON)**

The 2-pin connector allows you to connect the chassis-mounted reset button. Press the reset button to reboot the system.

10. GPIO connector

The GPIO connector allows you to connect a general purpose input/output module to customize digital signal input/output.

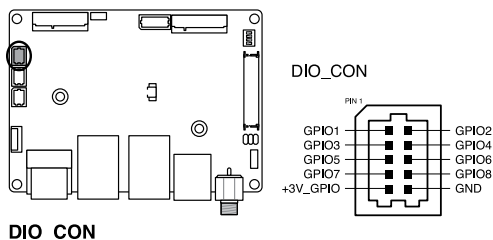


Connector type

BOX header 2x5p, K9, 1.0mm pitch

11. Fan connector

The fan connector allows you to connect a fan to actively cool the system.

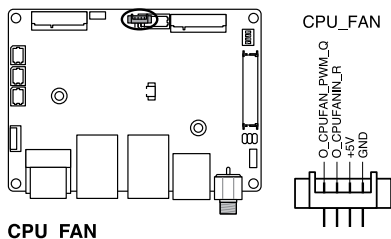

Connector type

WtoB 1x4p, 1.25mm pitch

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

2


Using your Embedded Computer

2.1 Getting started

2.1.1 Connect the AC power adapter to your Embedded Computer

To connect the AC power adapter to your Embedded Computer:

- Connect the power cord to the AC power adapter.
- Connect the DC power connector to your Embedded Computer's power (DC) input.
- Plug the AC power adapter into a 100 V~240 V power source.

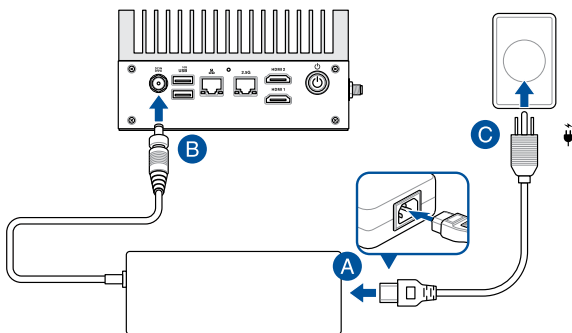

NOTE:

The power adapter may vary in appearance, depending on model and country (or region) of sale. Refer to the following for more information on the different power adapters, as well as the system:

90W Power adapter

- Input voltage: 100-240 Vac
- Input frequency: 50-60 Hz
- Rated output current: 7.5 A max (90.0 W)
- Rated output voltage: 12.0 Vdc

System

- Rated input current: 7.5 A (90.0 W)
 - Rated input voltage: 12.0 Vdc
-

IMPORTANT!

- We strongly recommend that you use only the AC power adapter and cable that came with your Embedded Computer.
 - We strongly recommend that you use a grounded wall socket while using your Embedded Computer.
 - The socket outlet must be easily accessible and near your Embedded Computer.
 - To disconnect your Embedded Computer from its main power supply, unplug your Embedded Computer from the power socket.
-

WARNING!

- Do not use power adapters or batteries from other devices to reduce the risk of injury to persons due to fire or explosion. Use only UL certified power adapters or batteries supplied by the manufacturer or authorized retailers.
 - Do not disable or remove the power cord grounding plug, the grounding is an important safety feature.
 - Ensure to plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.
-

2.1.2 Connect a display panel to your Embedded Computer


You can connect a display panel or projector to your Embedded Computer that has the following connectors:

- HDMI™ connector

To connect a display panel to your Embedded Computer:

Connect one end of an HDMI™ cable to an external display, and the other end of the cable to your Embedded Computer's HDMI™ port.

Connect display via HDMI™ port

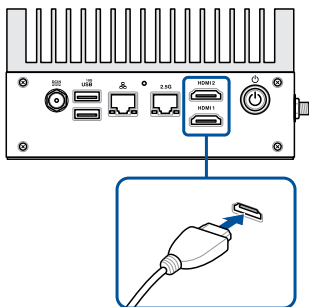

2.1.3 Connect the USB cable from keyboard or mouse


You can connect generally any USB keyboard and mouse to your Embedded Computer. You can also connect a USB dongle for a wireless keyboard and mouse set.

To connect a keyboard and mouse to your Embedded Computer:

Connect the USB cable from your keyboard and mouse to any of the USB ports of your Embedded Computer.


NOTE:

- The keyboard varies with country or region.
 - The keyboard and mouse are purchased separately.
-

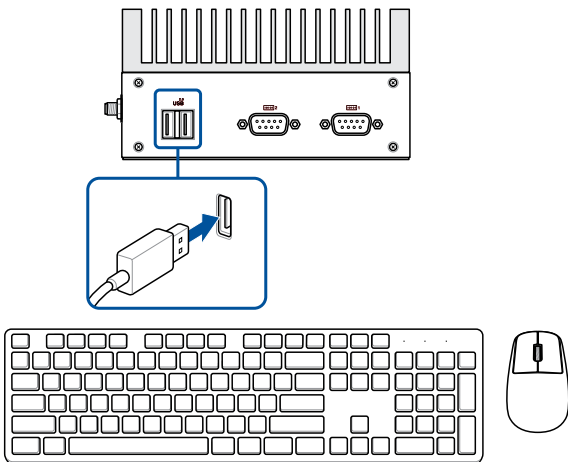

2.1.4 Turn on your Embedded Computer

Press the power button to turn on your Embedded Computer.

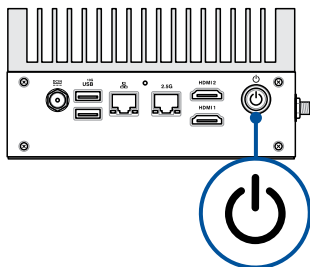

2.2 Turning off your Embedded Computer

If your Embedded Computer is unresponsive, press and hold the power button for at least four (4) seconds until your Embedded Computer turns off.

2.3 Putting your Embedded Computer to sleep

To put your Embedded Computer on Sleep mode, press the Power button once.

2.4 Entering the BIOS Setup

BIOS (Basic Input and Output System) stores system hardware settings that are needed for system startup in the Embedded Computer.

In normal circumstances, the default BIOS settings apply to most conditions to ensure optimal performance. Do not change the default BIOS settings except in the following circumstances:

- An error message appears on the screen during the system bootup and requests you to run the BIOS Setup.
- You have installed a new system component that requires further BIOS settings or update.

WARNING! Inappropriate BIOS settings may result to instability or boot failure. We strongly recommend that you change the BIOS settings only with the help of a trained service personnel.

2.4.1 Load default BIOS settings

To load the default values for each of the parameters in your BIOS:

1. Enter the BIOS by pressing <Delete> or <ESC> on the POST screen.

NOTE: POST (Power-On Self Test) is a series of software controlled diagnostic tests that run when you turn on your Embedded Computer.

2. Navigate to the **Exit** menu.
3. Select the **Load Optimized Defaults** option, or you may press <F3>.
4. Select **OK** to load the default BIOS values.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

3

Upgrading your Embedded Computer


IMPORTANT!

- Ensure that your hands are dry before proceeding with the rest of the installation process. Before installing any of the features in this guide, use a grounded wrist strap or touch a safely grounded object or metal object to avoid damaging them due to static electricity.
 - Turn off the power of your Embedded Computer, and allow it to cool for at least 10 minutes before performing any installation/uninstallation process.
-

NOTE: The illustrations in this section are for reference only. The slots may vary depending on model.


3.1 Removing the bottom cover

1. Turn off your Embedded Computer then disconnect all cables and peripherals.
2. Place the Embedded Computer on a flat stable surface, with its top side facing down.
3. Remove the four (4) rubber feet screws from the bottom cover.
4. Remove the two (2) screws securing the bottom cover.
5. After removing the screws, remove the bottom cover and place it aside.

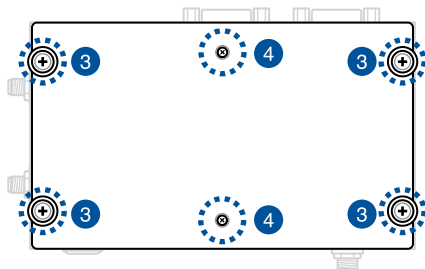


3.2 Replacing the bottom cover

1. Align the bottom cover with the screw holes, then replace the bottom cover onto the Embedded Computer.
2. Secure the bottom cover using the two (2) screws removed previously.
3. Replace the four (4) rubber feet screws removed previously.

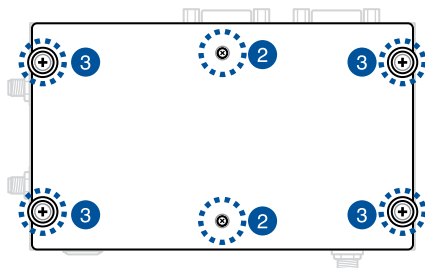

3.3 Installing an M.2 SSD

1. Remove the M.2 screw.
2. Align and insert the M.2 SSD into its slot inside the Embedded Computer.
3. Gently push down the M.2 SSD on top of the standoff, and fasten it using a screw.

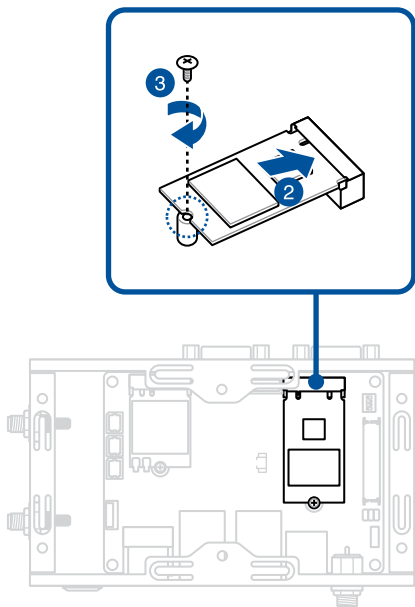




3.4 Installing a wireless card

1. Remove the M.2 screw.
 2. Align and insert the wireless card into the M.2 slot inside the Embedded Computer.
 3. Gently push down the wireless card on top of the standoff, and then fasten it using the previously removed screw.
 4. (Optional) Connect the RF cables from the antennas to your wireless card. Make sure that the correct cable is attached to each of the connectors by referring to the illustration on the next page.
-

NOTE:

- Please refer to the **Installing antennas** section for more information on installing the antennas.
 - Connecting antennas to your wireless card may strengthen the wireless signal.
 - A soft clicking sound indicates that the antenna has been securely attached on the wireless card.
-

WARNING! RF modules are intended for OEM or host integrators only. For availability of system level RF certification, check with your OEM integrator.

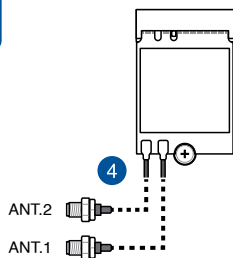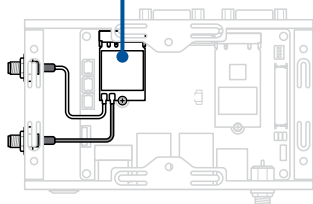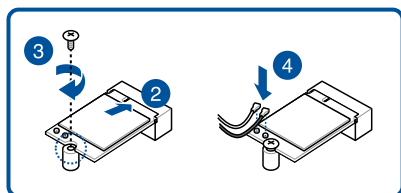

Ant. Jack	Module Connector
ANT. 1	WLAN-MAIN
ANT. 2	WLAN-AUX


3.5 Installing antennas (optional)

You may install antennas to the five (5) antenna jacks located on the front and rear panels. The installed antennas can be connected to an LTE module installed in the Mini PCIe/mSATA slot or to a wireless card installed in the M.2 Wi-Fi slot.

To install an antenna:

NOTE: If your Embedded Computer came pre-installed with wireless card antenna jacks, skip to step 8.


1. Remove the bottom cover. Refer to **Removing the bottom cover** for details.
2. Prepare the RF connector and cable.
3. Remove the rubber caps from the antenna holes.
4. Insert the antenna jack end of the RF connector and cable into the antenna hole from within the chassis outwards, ensuring that the flat edge of the jack is properly aligned to the flat edge of the hole.
5. Insert the bundled O-ring over the antenna jack.
6. Secure the antenna jack using one of the bundled hex screws.

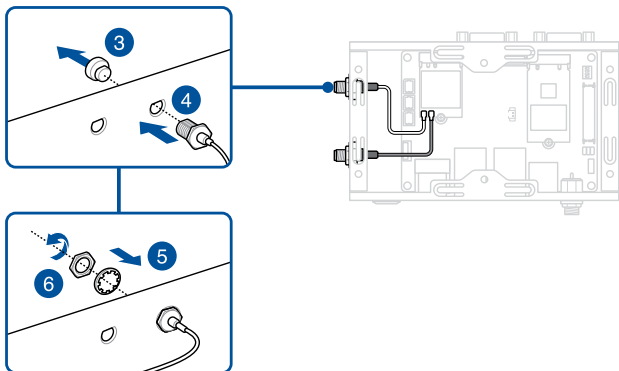


7. Connect the other end of the RF connector and cable to your wireless card (refer to **Installing a wireless card** for details).
8. Replace the bottom cover. Refer to **Replacing the bottom cover** for details.
9. Screw the external Wi-Fi antennas onto their corresponding antenna jacks on the front and rear panels by turning them in a clockwise direction.
10. Position the antennas for optimal signal reception.

3.6 Installing wall mount brackets (optional)

1. Remove the four (4) rubber feet screws (A), and then remove the rubber feet from the rubber feet screws (B).

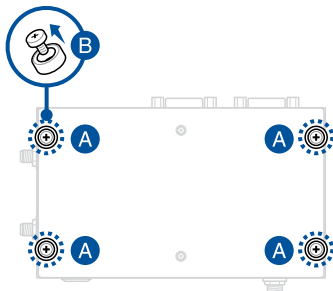


2. Align the wall mount with the rubber feet screw holes (A), and then secure the wall mount brackets to your Embedded Computer using the rubber feet screws (B).

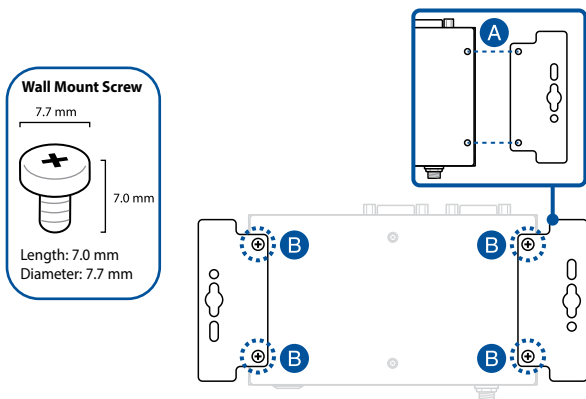

NOTE: The rubber feet and wall mount screws are the same screws.

3.7 Installing a DIN rail clip (optional)

1. Align the screw holes on the DIN rail clip to the DIN rail clip mounting holes on your Embedded Computer (refer to the **Left view** section for the location of the screw holes).
2. Secure the DIN rail clips to the wall mount brackets using the screws bundled with the DIN rail clips.

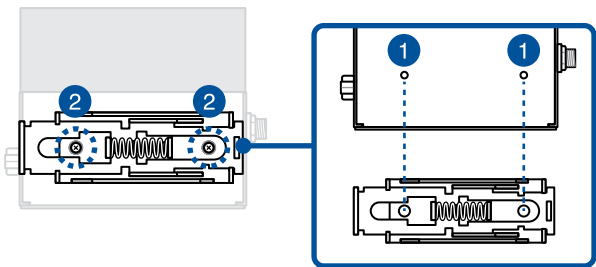

3. Clip the final assembly to a DIN rail by hooking the DIN rail clips to the top of the DIN rail and then pressing down until you hear the clips snap into place.

4

Watchdog Timer

4.1 Watchdog Timer implementation


The Watchdog Timer used in this Embedded Computer is the POST Watchdog Timer. The Watchdog Timer circuit is in SuperIO and can be controlled by the BIOS setup menu through the system BIOS for different boot phases.

Please refer to the table below for more details on the implementation of the Watchdog Timer.

Watchdog Timer	Implementation	Default Timeout
POST Watchdog Timer	This Watchdog Timer is for recovering the system from crashes during BIOS takeover to OS.	The timeout value is determined by the BIOS settings.
	NOTE: The default setting for the BIOS item is set to enabled.	
*OS Watchdog Timer	No implementation. User needs to write software in OS to keep updating the watchdog timer to prevent it from timing out. The application is executed on payload.	N/A
	NOTE: Please refer to the section Watchdog Timer Programming for more information.	

4.2 Watchdog Timer flowchart

Please refer to the Watchdog Timer initialization flowchart below:

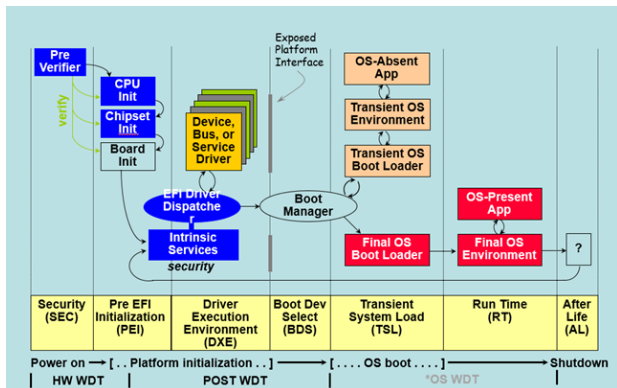

4.3 Watchdog Timer programming

Please refer to the pseudo code for the NCT6116D watchdog timer programming below:

SIO_INDEX_PORT is 0x2E

SIO_DATA_PORT is 0x2F

1. Set WDT Time Unit

```
Outportb(SIO_INDEX_PORT, 0x87); // Unlock SIO
```

```
Outportb(SIO_INDEX_PORT, 0x87); // Unlock SIO
```

```
Outportb(SIO_INDEX_PORT, 0x07);
```

```
Outportb(SIO_DATA_PORT, 0x08);
```

```
Outportb(SIO_INDEX_PORT, 0xF0);
```

```
val = Inportb(SIO_DATA_PORT) // Read current WDT setting
```

```
val = val | 0x08; // minute mode, val = val & 0xF7 if second mode
```

```
Outportb(SIO_INDEX_PORT, 0xF0);
```

```
Outportb(SIO_DATA_PORT, val); // Write back WDT setting
```

```
Outportb(SIO_INDEX_PORT, 0xAA); // Lock SIO
```

2. Set WDT Time

```
Outportb(SIO_INDEX_PORT, 0x87); // Unlock SIO
Outportb(SIO_INDEX_PORT, 0x87); // Unlock SIO

Outportb(SIO_INDEX_PORT, 0x07);
Outportb(SIO_DATA_PORT, 0x08);
Outportb(SIO_INDEX_PORT, 0xF1);
Outportb(SIO_DATA_PORT, Time); // Write WDT time, value 1 to 255

Outportb(SIO_INDEX_PORT, 0xAA); // Lock SIO
```

3. Enable WDT

```
Outportb(SIO_INDEX_PORT, 0x87); // Unlock SIO
Outportb(SIO_INDEX_PORT, 0x87); // Unlock SIO

Outportb(SIO_INDEX_PORT, 0x07);
Outportb(SIO_DATA_PORT, 0x08);
Outportb(SIO_INDEX_PORT, 0x30);
val = Inportb(SIO_DATA_PORT) // Read current WDT status

val = val | 0x01; // Enable WDT Timer
Outportb(SIO_INDEX_PORT, 0x30);
Outportb(SIO_DATA_PORT, val); // Write back WDT status

Outportb(SIO_INDEX_PORT, 0xAA); // Lock SIO
```

4. Disable WDT

```
Outportb(SIO_INDEX_PORT, 0x87); // Unlock SIO
Outportb(SIO_INDEX_PORT, 0x87); // Unlock SIO

Outportb(SIO_INDEX_PORT, 0x07);
Outportb(SIO_DATA_PORT, 0x08);
Outportb(SIO_INDEX_PORT, 0xF1);
Outportb(SIO_DATA_PORT, 0x00); // Clear WDT time, it means WDT Time-
    Out disable

Outportb(SIO_INDEX_PORT, 0x30);

val = Inportb(SIO_DATA_PORT) // Read current WDT status
val = val & 0xFE; // Disable WDT Timer
Outportb(SIO_INDEX_PORT, 0x30);
Outportb(SIO_DATA_PORT, val); // Write back WDT status

Outportb(SIO_INDEX_PORT, 0xAA); // Lock SIO
```


Appendix

Safety information

Your Embedded Computer is designed and tested to meet the latest standards of safety for information technology equipment. However, to ensure your safety, it is important that you read the following safety instructions.

Setting up your system

- Read and follow all instructions in the documentation before you operate your system.
- Do not use this product near water or a heated source.
- Set up the system on a stable surface.
- Peripherals with extended tolerance (such as industrial grade mSATA and micro SD card) will allow this product to be used in environments with ambient temperatures between -40°C and 60°C with 0.1 m/s air flow.
- The product should be used in environments with ambient temperatures between -40°C and 60°C when using the 90 W power adapter.
- If you use an extension cord, make sure that the total ampere rating of the devices plugged into the extension cord does not exceed its ampere rating.
- This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.
- This device shall not be connected to an Ethernet network with outside plant routing.

Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill water or any other liquids on your system.
- When the system is turned off, a small amount of electrical current still flows. Always unplug the power cord from the power outlets before cleaning the system.
- If you encounter the following technical problems with the product, unplug the power cord and contact a qualified service technician or your retailer.
 - The power cord or plug is damaged.
 - Liquid has been spilled into the system.
 - The system does not function properly even if you follow the operating instructions.
 - The system was dropped or the cabinet is damaged.
 - The system performance changes.

Safety Precautions

Accessories that came with this product have been designed and verified for the use in connection with this product. Never use accessories for other products to prevent the risk of electric shock or fire.

Lithium-Ion Battery Warning

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

NO DISASSEMBLY

The warranty does not apply to the products that have been disassembled by users

Regulatory notices

COATING NOTICE

IMPORTANT! To provide electrical insulation and maintain electrical safety, a coating is applied to insulate the device except on the areas where the I/O ports are located.

Federal Communications Commission Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

IMPORTANT! Outdoor operations in the 5.15~5.25 GHz band is prohibited. This device has no Ad-hoc capability for 5250~5350 and 5470~5725 MHz.

CAUTION! Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The exposure standard employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the EUT transmitting at the specified power level in different channels. The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid.

End Product Labeling

This transmitter module is authorized only for use in device where the antenna may be installed such that 20 cm may be maintained between the antenna and users.

ISED Radiation Exposure Statement for Canada

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. To maintain compliance with ISED RF exposure compliance requirements, please avoid direct contact to the transmitting antenna during transmitting. End users must follow the specific operating instructions for satisfying RF exposure compliance.

Operation is subject to the following two conditions:

- This device may not cause interference and
- This device must accept any interference, including interference that may cause undesired operation of the device.

RF Module Warning Statement

RF modules are intended for OEM or host integrators only. For availability of system level RF certification, check with your OEM integrator.

Compliance Statement of Innovation, Science and Economic Development Canada (ISED)

This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-003(A)/NMB-003(A)

Déclaration de conformité de Innovation, Sciences et Développement économique Canada (ISED)

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAN ICES-003(A)/NMB-003(A)

Wireless Operation Channel for Different Domains

N. America	2.412-2.462 GHz	Ch01 through CH11
Japan	2.412-2.484 GHz	Ch01 through Ch14
Europe ETSI	2.412-2.472 GHz	Ch01 through Ch13

KC: Korea Warning Statement

Class A:

사용자 안내문

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

VCCI: Japan Compliance Statement

Class A ITE

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI — A

Japan RF Equipment Statement

屋外での使用について

本製品は、5GHz帯域での通信に対応しています。電波法の定めにより5.2GHz、5.3GHz帯域の電波は屋外で使
用が禁じられています。

法律および規制遵守

本製品は電波法及びこれに基づく命令の定めるところに従い使用してください。日本国外では、その国の法律ま

たは規制により、本製品の使用ができないことがあります。このような国では、本製品を運用した結果、罰せられ

ることがありますが、当社は一切責任を負いかねますのでご了承ください。

HDMI Trademark Notice

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Declaration of compliance for product environmental regulation

ASUS follows the green design concept to design and manufacture our products, and makes sure that each stage of the product life cycle of ASUS product is in line with global environmental regulations. In addition, ASUS disclose the relevant information based on regulation requirements.

Please refer to <https://csr.asus.com/Compliance.htm> for information disclosure based on regulation requirements ASUS is complied with:

EU REACH and Article 33

Complying with the REACH (Registration, Evaluation, Authorization, and Restriction of Chemicals) regulatory framework, we publish the chemical substances in our products at ASUS REACH website at

<https://csr.asus.com/english/REACH.htm>

EU RoHS

This product complies with the EU RoHS Directive. For more details, see

<https://csr.asus.com/english/article.aspx?id=35>

Japan JIS-C-0950 Material Declarations

Information on Japan RoHS (JIS-C-0950) chemical disclosures is available on

<https://csr.asus.com/english/article.aspx?id=19>

India RoHS

This product complies with the “India E-Waste (Management) Rules, 2016” and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls (PBBs) and polybrominated diphenyl ethers (PBDEs) in concentrations exceeding 0.1% by weight in homogenous materials and 0.01% by weight in homogenous materials for cadmium, except for the exemptions listed in Schedule II of the Rule.

Vietnam RoHS

ASUS products sold in Vietnam, on or after September 23, 2011, meet the requirements of the Vietnam Circular 30/2011/TT-BCT.

Các sản phẩm ASUS bán tại Việt Nam, vào ngày 23 tháng 9 năm 2011 trở về sau, đều phải đáp ứng các yêu cầu của Thông tư 30/2011/TT-BCT của Việt Nam.

Türkiye RoHS

AEEE Yönetmeliğine Uygundur

ASUS Recycling/Takeback Services

ASUS recycling and takeback programs come from our commitment to the highest standards for protecting our environment. We believe in providing solutions for you to be able to responsibly recycle our products, batteries, other components as well as the packaging materials. Please go to <https://csr.asus.com/english/Takeback.htm> for detailed recycling information in different regions.

Ecodesign Directive

European Union announced a framework for the setting of ecodesign requirements for energy-related products (2009/125/EC). Specific Implementing Measures are aimed at improving environmental performance of specific products or across multiple product types. ASUS provides product information on the CSR website. The further information could be found at <https://csr.asus.com/english/article.aspx?id=1555>.

低功率電波輻射性電機管理辦法

第十二條：經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條：低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

Taiwan NCC Warning Statement

Article 12: Without permission, any company, firm or user shall not alter the frequency, increase the power, or change the characteristic and functions of the original design of the certified lower power frequency electric machinery.

Article 14: The application of lower power frequency electric machineries shall not affect the navigation safety nor interfere alegal communication, if an interference is found, the service will be suspended until improvement is made and theinterference no longer exists.

甲類警語

警告：為避免電磁干擾，本產品不應安裝或使用於住宅環境。

「產品之限用物質含有情況」之相關資訊，請參考下表：
Taiwan Declaration of Restricted Substances Marking

單元 (Unit)	限用物質及其化學符號 (Restricted substances and its chemical symbols)					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadium (Cd)	六價鉻 Hexavalent chromium (Cr ⁶⁺)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyls ethers (PBDE)
印刷電路板 及電子組件 PCB	—	○	○	○	○	○
外殼 Chassis	—	○	○	○	○	○
硬碟 Disk drive	—	○	○	○	○	○
散熱設備 Thermal solutions	—	○	○	○	○	○
其他及其 配件 (線材等) Accessories (e.g., cables)	—	○	○	○	○	○
備考 1. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 備考 2. “—” 係指該項限用物質為排除項目。 Note 1 “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. Note 2 The “—” indicates that the restricted substance corresponds to the exemption.						

Service and Support

Visit our multi-language website at <https://www.asus.com/support/>.



This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.